

Quick User Guide **NMS-1000V**



Sections

a)	Overview	3~5
b)	Application	6~7
c)	Before First Login	8~16
d)	Setup Wizard	17~21
e)	Main UI Introduction	22~24
f)	Dashboard Introduction	25~29
g)	Footer Introduction	30~31
h)	System Menu - Domain	32~40
i)	System Menu - AP Control	41~58
j)	System Menu - Refresh	59~60
k)	System Menu - System Configuration	61~68
l)	System Menu - Network Services	69~80
m)	System Menu - Maintenance	81~86
n)	System Menu - Exit	87~89
o)	HDMI Output	90~91
p)	Appendix	92~93



OVERVIEW

Overview

➤ Main Features:

Dashboard	Providing the at-a-glance view of system, device summary, traffic, PoE network status
Wizard setup	Easy to use step-by-step guidance
Node Discovery	To detect PLANET managed devices available and allow AP grouping to accelerate AP management
Topology Viewer	A topology of network devices compliant with SNMP, ONVIF, Smart Discovery and LLTD Protocol
Event Reports	The status of a network can be reported via network alarm and system log
Alarm System	Popup alerts and email alerts for the administrator via the SMTP server
Batch Provisioning	Enabling multiple APs to be configured and upgraded at one time by using the designated profile
Coverage Heat Map	Real-time signal coverage of APs on the user-defined floor map to optimize Wi-Fi field deployment
Customized Profile	Allowing the creation and maintenance of multiple wireless profiles
Auto Provisioning	Multi-AP provisioning with one click
Cluster Management	Simplifying high-density AP management
Zone Plan	Optimizing AP deployment with actual signal coverage
Authentication	Built-in RADIUS server seamlessly integrated into the enterprise network
User Control	Allowing on-demand account creation and user-defined access policy
Scalability	Free system upgrade and AP firmware bulk upgrade capability
Maximum Scalability	50 floor maps, 1024 nodes, 128 AP groups, 128 SSID profiles, 1024 managed APs, 20,000 clients, 20,000 RADIUS user accounts, 50 RADIUS user groups and 1024 RADIUS clients

Overview

➤ Network Management Characteristics

- Built-in DHCP server
- Built-in RADIUS server
- SSL secure access
- Web-based GUI management interface
- SNMP v1, v2c, and v3 management
- Supports PLANET DDNS/Easy DDNS

➤ Industrial-grade Physical Hardware

- 2 10/100/1000BASE-T Gigabit Ethernet RJ45 ports
- 2 USB 3.0 ports for configuration backup and restoration
- 1 audio line out (reserve)
- 1 HDMI interface
- 2 DB-9 COM1,COM2 (reserved)
- 1 3-pin DC power input terminal
- 1 2-pin connector for power on/off button (reserve)
- VESA (100 x 100) panel mount



➤ Physical Specifications

Storage	2.5" 32G SATA3 HDD	
Touch LCD Size	NMS-1000V-12: 12.1" TFT-LCD	NMS-1000V-10: 10.1" TFT-LCD
Touch Type	Resistive Touch Window Projected Capacitive Touch	
Display Resolution	NMS-1000V-12: 1024 x 768	NMS-1000V-10: 1280 x 800
Display Luminance (cd/m ²)	NMS-1000V-12: 500	NMS-1000V-10: 350
Display Viewing Angle (H°/V°)	NMS-1000V-12: 160(H)/140(V)	NMS-1000V-10: 160(H)/160(V)
Display Contrast	NMS-1000V-12: 700:1	NMS-1000V-10: 800:1
Display Backlight Lifetime (hrs.)	NMS-1000V-12: 30,000 hrs.	NMS-1000V-10: 40,000 hrs.
Light Transmission (%)	Resistive Touch Window: over 80% Projected Capacitive Touch: over 90%	
Dimensions (W x D x H)	NMS-1000V-12: 319 x 51.7 x 245 mm	NMS-1000V-10: 285 x 49 x 189 mm
Weight	NMS-1000V-12: 2.9 kg	NMS-1000V-10: 2 kg
Enclosure	Aluminum Die-casting Chassis	
Power Requirements	DC IN 9~36V 60W adapter 12V 5A with terminal block AC 100~240V, 2.0A, 60~50Hz.	



APPLICATIONS

Applications

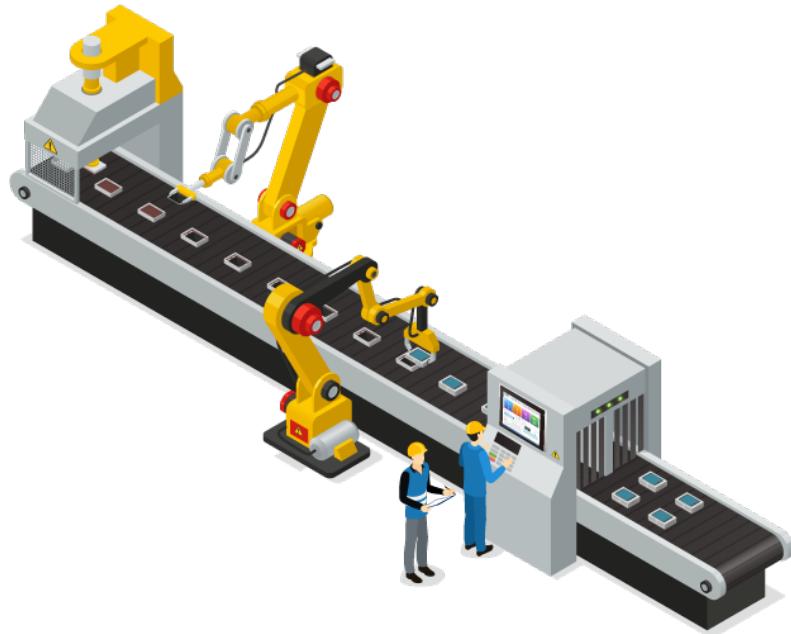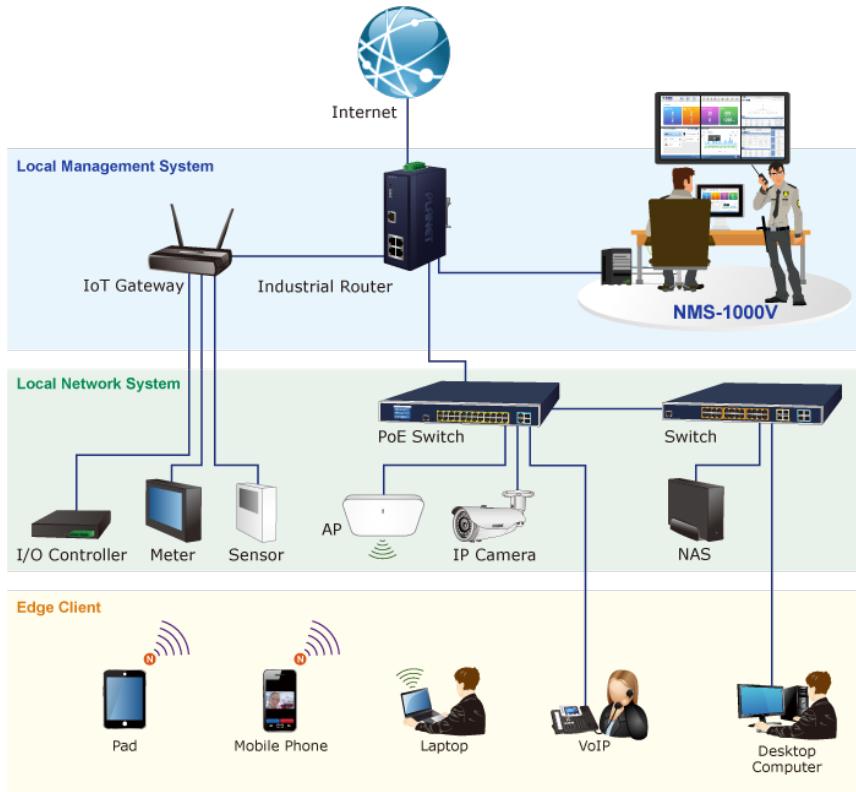




BEFORE FIRST LOGIN

Front & Rear Panels

◆ Front Panel

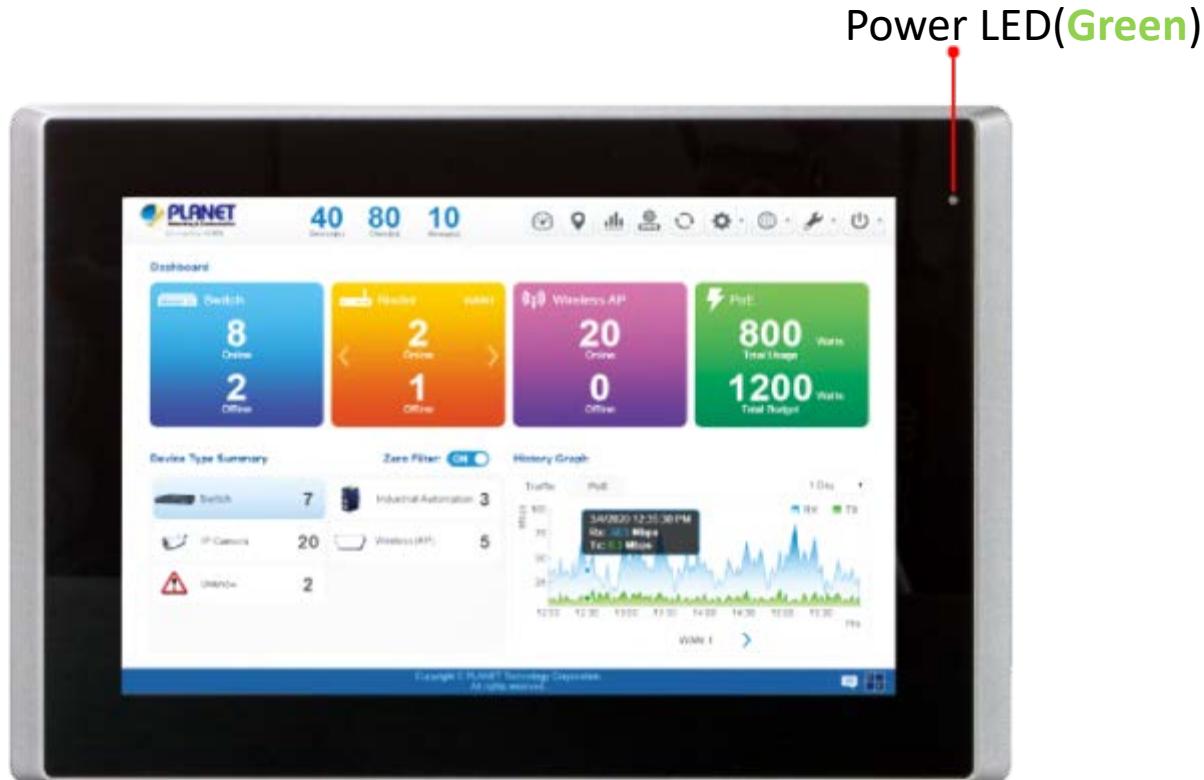

Front & Rear Panels

◆ Back Panel




9-36V DC IN

*Just connect NMS-1000V DC IN to turn on system.


Front & Rear Panels

◆ Bottom Panel

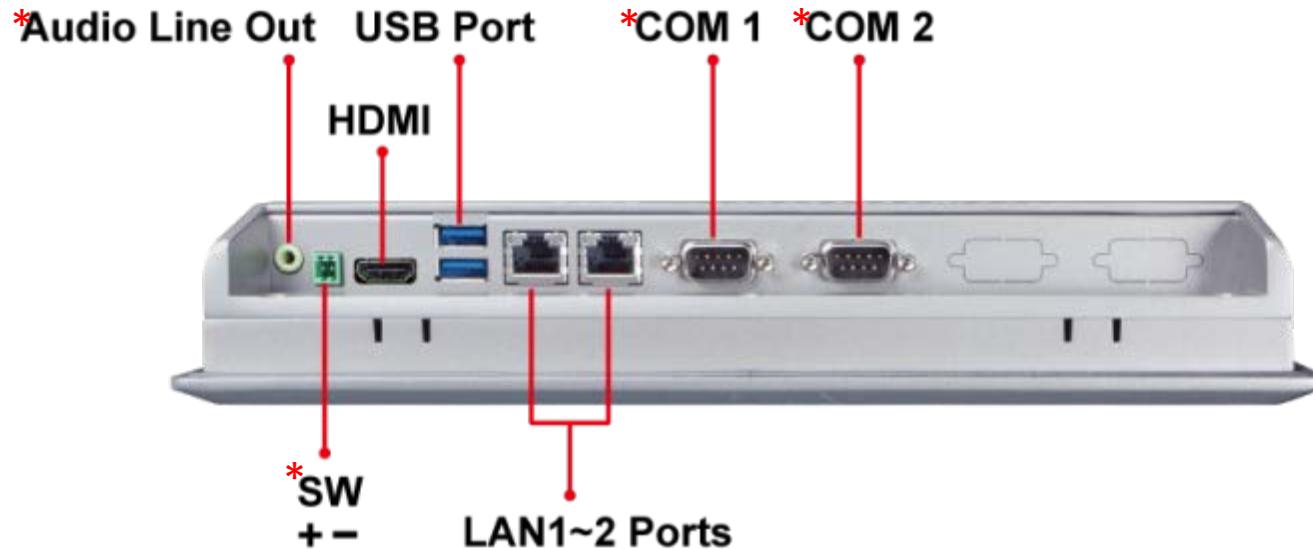

*.Function reserved

Device Setting

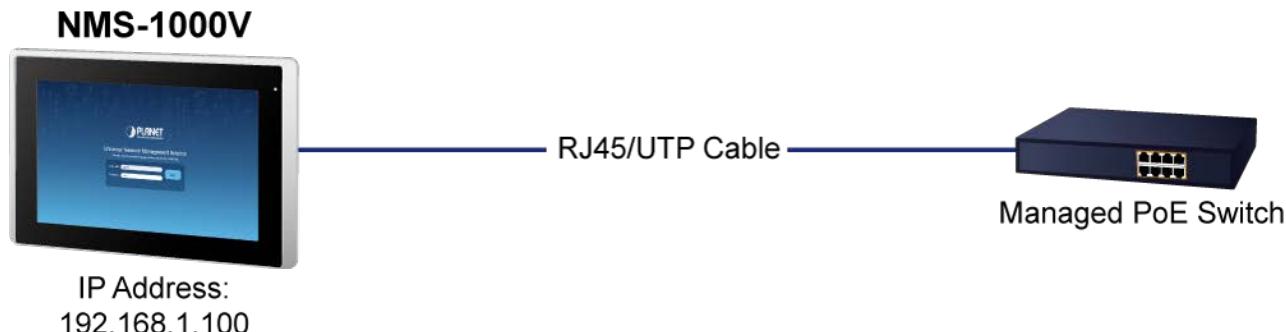

Switch: Log in to the Switch's Web User Interface and refer to the picture below to enable the SNMP and LLDP function as shown in Figures 1 and 2.


AP: Log in to the AP's Web User Interface and refer to Figure 3 below to configure the AP to "Managed AP". Then, click "Apply Change". To support SNMP AP, enable the SNMP function.

IP Cam: The ONVIF function is enabled by default.

Device Setting



(Figure 1)

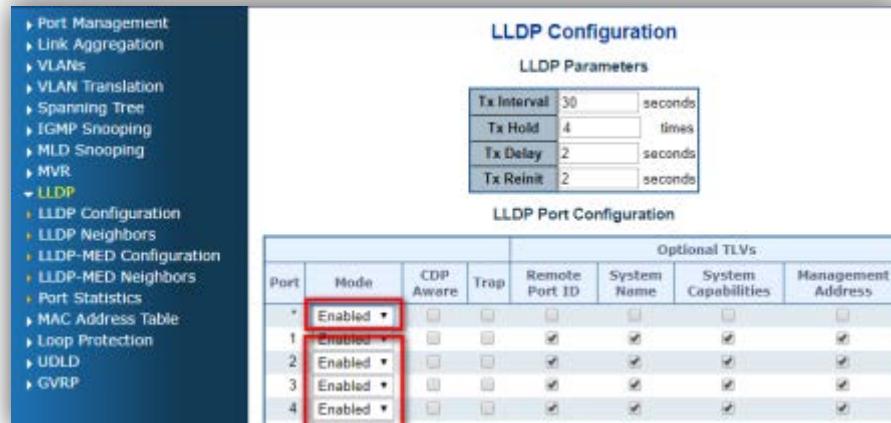

LLDP Configuration

LLDP Parameters

Tx Interval	30	seconds
Tx Hold	4	times
Tx Delay	2	seconds
Tx Reinit	2	seconds

LLDP Port Configuration

Port	Mode	Optional TLVs						
		CDP Aware	Trap	Remote Port ID	System Name	System Capabilities	Management Address	
1	Enabled	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	
2	Enabled	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	
3	Enabled	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	
4	Enabled	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	

(Figure 2)

Device Setting

Setup Menu:

- > Operation Mode
- > Setup Wizard
- > WLAN1 (5 GHz)
- > WLAN2 (2.4 GHz)
- > TCP / IP Settings
- > Management
- > Logout

Operation Mode

AP Operation mode configuration is used to configure the managed AP administrative mode.

Standalone AP In Mode **Standalone AP**, the AP acts as an individual AP in the network, and you manage it by using the Administrator Web User Interface (UI), or SNMP.

Managed AP In Mode **Managed AP**, the AP is part of the PLANET Wireless AP controller System, and you manage it by using the WAPC Wireless Switch.

AP Controller IP Address

(Figure 3)


Logging in NMS

- ◆ Username: admin
- ◆ Password: admin



Remote Logging in NMS

- ◆ Open Chrome/Firefox to log in the NMS.(Default IP: <https://192.168.1.100:8888>)
- ◆ Please use Chrome/Firefox to get fully supported. (UI Resolution [1280 x 768](#))

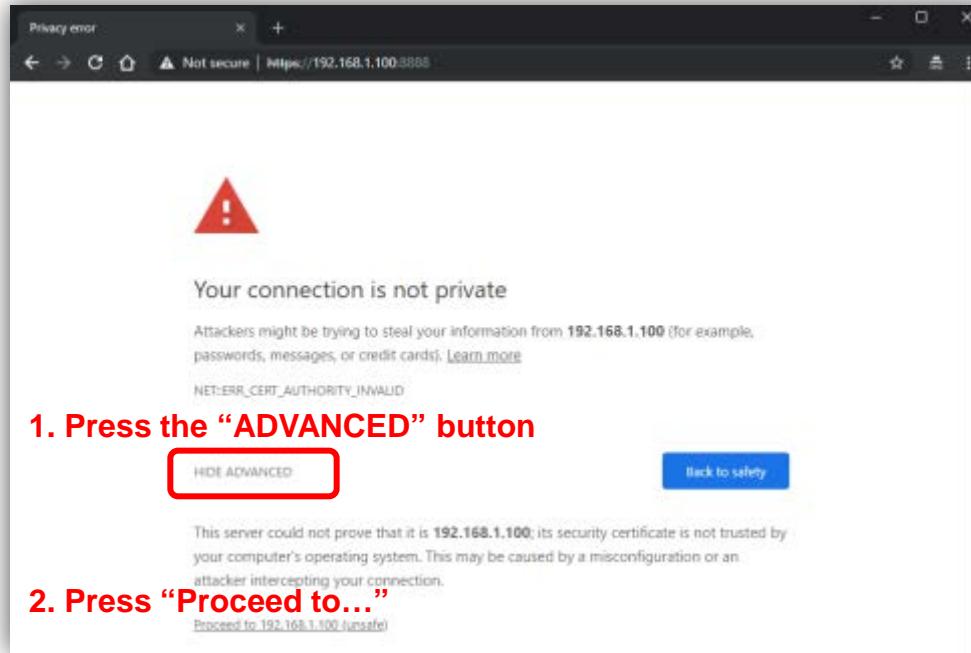



SETUP WIZARD

Account Modification

Steps to modifying account:

- ◆ 1. Please key in a new account, except using "admin"
- ◆ 2. New Password must include at least 1*[a~z], 1*[A~Z], 1*[0~9], 1*[~, !, @, ..., w/o "?"] and must contain at least 8 characters.

Account Modification

Configuration	
User Name	admin123
Password	1qaz!QAZ
Retype Password	*****

*Please key in a new account, except using "admin".
New Password must be included at least 1*[a~z], 1*[A~Z], 1*[0~9], 1*[~, !, @, ..., w/o "?"]

IP Configuration Setting

- ◆ 1. Select “Static IP” or “DHCP Client” for IP configuration setting.
- ◆ 2. IP status is shown in real time.

*If you want to use the SMTP Alarm function, you must at least enter one DNS server.

IP Configuration Setting

	Configuration	Status
Mode	Static IP	Static
IP Address	10.1.0.199	10.1.0.199
Subnet Mask	255.255.254.0	255.255.254.0
Default Gateway	10.1.1.254	10.1.1.254
DNS Server 1	10.1.1.2	10.1.1.2
DNS Server 2	10.1.1.3	10.1.1.3

Back Next

SNMP Preference Setting

- ◆ 1. Select Region for AP Control (ETSI or FCC).
- ◆ 2. And enter the RO/RW Community for AP's SNMP.

SNMP Preference Setting

Configuration	
Region *	<input type="text" value="ETSI"/>
RO Community	public
RW Community	private

*Select Region for AP Control (ETSI or FCC)

[Back](#) [Next](#)

Devices Discovery

- ◆ 1. Press the Search button to discover PLANET devices.
- ◆ 2. Give a check to a box and press the “Add” button to add a device to the NMS system.
- ◆ 3. Press the Finish button to leave the Wizard mode and finish the start-up setting.

Devices Discovery

#	Num.	Device Type	Model No.	Device IP	Device Description
1	1	Media Converter	N/A	10.1.1.250	WPS
2	2	Media Converter	N/A	10.1.1.252	WPS
3	3	Wireless	WNAP-C3220E	10.1.1.247	
4	4	Wireless	WNAP-C3220E	10.1.1.240	
5	5	Wireless	WNAP-C3220E	10.1.1.248	
6	6	N/A	GS-4210-48P4S	192.168.1.131	GS-4210-48P4S
7	7	N/A	WGSGW-28040	10.1.1.220	Default Location

1. Search 2. Add 3. Filter by Content 🔍

<input type="checkbox"/>	14	N/A	VIP-1010PT	10.1.10.67	HD PoE IP Phone(1-Line)
--------------------------	----	-----	------------	------------	-------------------------

4. Finish

○ ○ ○ ●



MAIN UI INTRODUCTION

Home Page - Dashboard UI Structure



The screenshot illustrates the Home Page - Dashboard UI Structure of the PLANET Universal HMS. The interface is organized into several sections:

- A:** Top right corner showing device counts: 40 Device(s), 80 Client(s), 10 Group(s).
- B:** Top right corner showing navigation icons: clock, location, chart, settings, globe, wrench, power, and a refresh symbol.
- C:** Dashboard summary cards:
 - Switch: 8 Online, 2 Offline
 - Router: 2 Online, 1 Offline
 - Wireless AP: 20 Online, 0 Offline
 - PoE: 800 Total Usage Watts, 1200 Total Budget Watts
- D:** Device Type Summary table:

Device Type	Count
Switch	7
Industrial Automation	3
IP Camera	20
Wireless(AP)	5
Unknown	2
- E:** History Graph showing Traffic (RX and TX) over 1 Day for WAN 1. A tooltip shows data for 3/4/2020 12:35:30 PM: Rx: 32.5 Mbps, Tx: 8.3 Mbps.
- F:** Bottom right corner showing a message icon.

Copyright © PLANET Technology Corporation. All rights reserved.

Main Dashboard - Description

Item	Description	Remarks
A	Device Status Summary	<p>1. Roughly shows the system status: Current devices online (total online), clients (total active clients), device groups (total groups)</p> <p>2. Click the PLANET Logo to connect to PLANET Web site.</p>
B	System Menu	<p>From left to right:</p> <ol style="list-style-type: none"> 1. Dashboard: Provides the whole system view and wireless network status 2. Domain: Discovery / Device List / Topology View / Event / syslog page 3. Advanced Graph: future feature 4. AP Control: 1. Preference, 2. Profiles, 3. Control, 4. Map It and 5. Statistics 5. Refresh 6. System Configuration: Alert configuration, Date and Time, Interface, IP, Account, Wizard setting 7. Network Services: 1. Planet DDNS, 2. DHCP Server, 3. SMPT, 4. SNMP Agent, and 5. RADIUS Service, 8. Maintenance: System upgrade, backup and restoration, factory default, system setting. 9. Exit: Click to opt for the logout, reboot or shutting down of the system
C	Local Site Information	<p>1. Switch status, 2. Router status, 3. Access Point status and 4. Total PoE status, *Click Device type button to filter each type of device via device list.</p>
D	Device Type Summary	Show the real-time total quantity of devices under different types
E	History Graph	Show the history graph of WAN traffic / total PoE usage and budget
F	Popup Alert Message Window	Open to show the system event instantly



DASHBOARD INTRODUCTION


Dashboard - Local Site Information

- **Local Site Information:** In this area, you can view 1. Switch, 2. Router , 3. Access Point online/off status and 4. Total PoE usage and budget status.
- Click Router “>” button to see the WAN real-time traffic throughput of Mbps, Kbps... . Click Router “<” button to go back to status.



Dashboard (Home)

- Click the Device type button to filter each type device via device list.

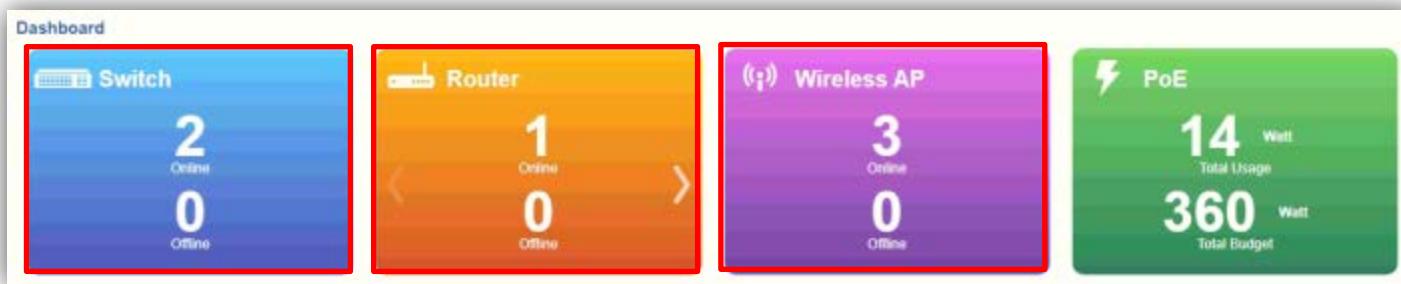




Device List table:

Discovery		Device List		Topology View									
Status	Group	MAC Address	Device Type	Model No.	Version	IP Address	Device Description	Authorization Status	Action				
●		a8:f7:e0:62:31:80	Industrial Switch	IGB-5225-8P4S	v3.440t200331	192.168.1.180	IE L2+ Managed PoE+ Switch	●					
●		a8:f7:e0:65:e5:e1	Switch	GS-4210-8P2S	v2.305t200330	192.168.1.148	L2/L4 Managed PoE Switch	●					

- **Switch:** Click the “Switch Button” to filter the type of Switch, Industrial Switch, and Media Converter.
- **Router:** Click to “Router Button” to filter the type of Router.
- **Wireless AP:** Click the “Wireless AP Button” filter the type of Wireless (AP).


Dashboard - Device Type Summary

- **Device Type Summary :** Show the real-time total quantity of devices under different types.
- **Open the “Zero Filter Button”** to filter the 0 quantity of devices type not shown. If this function is closed, you can see all types that NMS can manage.
- Click the Device type button to filter each type of device via device list.

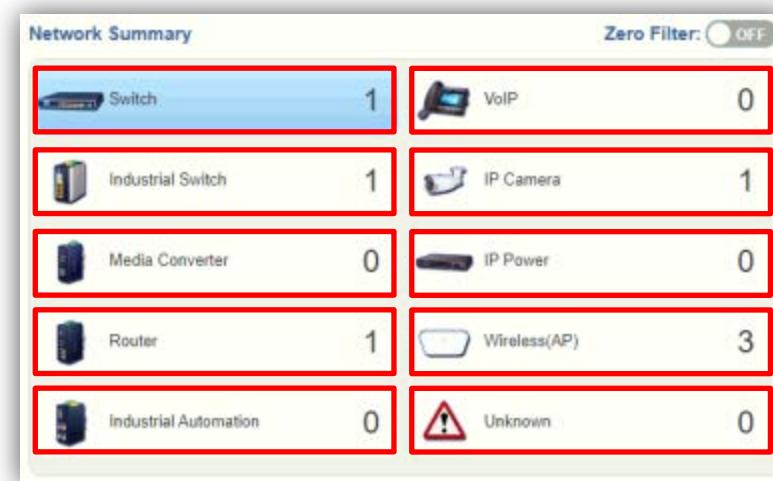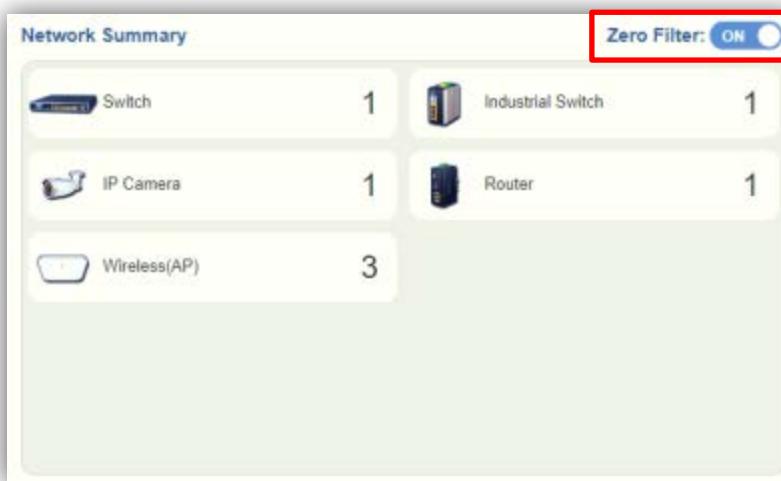

Dashboard - History Graph

- **History Graph:** Show the history graph of WAN traffic / total PoE usage and budget.
- Press the “WAN” or “PoE” sheet button to change the type of history graph. Press the “Interval Button” to change the interval for day, week, or month. Then you can see the WAN traffic / total PoE usage and budget.

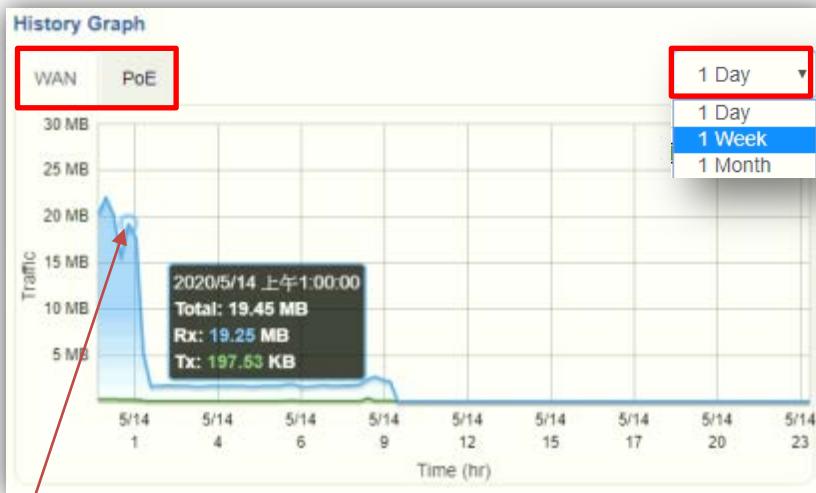

*Moving finger or mouse cursor on graph can let you see the detailed information.



FOOTER INTRODUCTION

Footer - Popup Alert Message

- **Popup Alert Message :** Click the “Message” icon (No. 1) to show the last 30 system events in popup window.
- The last event will be shown on the top page; press the “X” icon (No. 2) to close each message.



The screenshot shows the PLANET NMS dashboard with three main sections: Switch, Router, and Wireless AP. Below these are Network Summary tables and a History Graph. A 'Message' icon (No. 1) is located in the bottom right corner of the dashboard. A red box highlights this icon. To its right, an 'Alert Message' window is open, listing system events. A 'Close' icon (No. 2) is located in the top right corner of this window, also highlighted with a red box.

Alert Message

Status	Connect
Device Type	Industrial Switch
Information	IGS-5225-8P4S 192.168.1.180 a8:7e:60:62:31:80
Time	10:05:00
Status	Disconnect
Device Type	Industrial Switch
Information	IGS-5225-8P4S 192.168.1.180 a8:7e:60:62:31:80
Time	09:18:00
Status	Connect
Device Type	Industrial Switch
Information	IGS-5225-8P4S 192.168.1.180 a8:7e:60:62:31:80
Time	09:18:00
Status	Disconnect
Device Type	Industrial Switch
Information	IGS-5225-8P4S 192.168.1.180 a8:7e:60:62:31:80

Copyright © PLANET Technology Corporation
All rights reserved.



SYSTEM MENU - DOMAIN

Discovery

- ◆ Press the “Domain” icon (No. 1) , and then press Discovery (No. 2) and Search (No. 3) to find the managed APs and continue other settings.



The screenshot shows the PLANET NMS-1000V interface. At the top, there are three zero counters (Device(s), Client(s), Group(s)). Below the toolbar, the navigation bar includes 'Discovery' (which is highlighted with a red box), 'Device List', and 'Topology View'. The main area displays a table of managed devices with columns: Num., MAC Address, Device Type, Model No., Version, Device IP, Device Description, and Support Authorization. The 'Support Authorization' column contains icons representing different levels of support. A red box highlights the 'Search' button in the toolbar above the table.

➤ **Support Authorization:** If the devices support MQTT protocol, the status will show “Blue Key”.


Event	Syslog	<> 2020-05-14 >>					Search	Filter	1	/7	>>
ID	Type	Time	Source	Status	Device Type	Information					
1	System	11:16:55	192.168.1.145	Delete	Unknown	ICA-3460V 192.168.1.177 00.30.4f.00.06.45					
2	System	11:16:55	192.168.1.145	Delete	Wireless	WBS-502AC 192.168.1.172 88:dc:96:56:7c:84					
3	System	11:16:55	192.168.1.145	Delete	Unknown	WNAP-W2201A 192.168.1.253 8c:88:2b:00:00:46					

Copyright © PLANET Technology Corporation
All rights reserved.

Key	Status
	Supported
	Not supported
	Managed by the other NMS

Adding Devices to List

- Select devices (No. 1) by checking the boxes, and then press the “Apply” icon (No. 2) to add devices to management list.

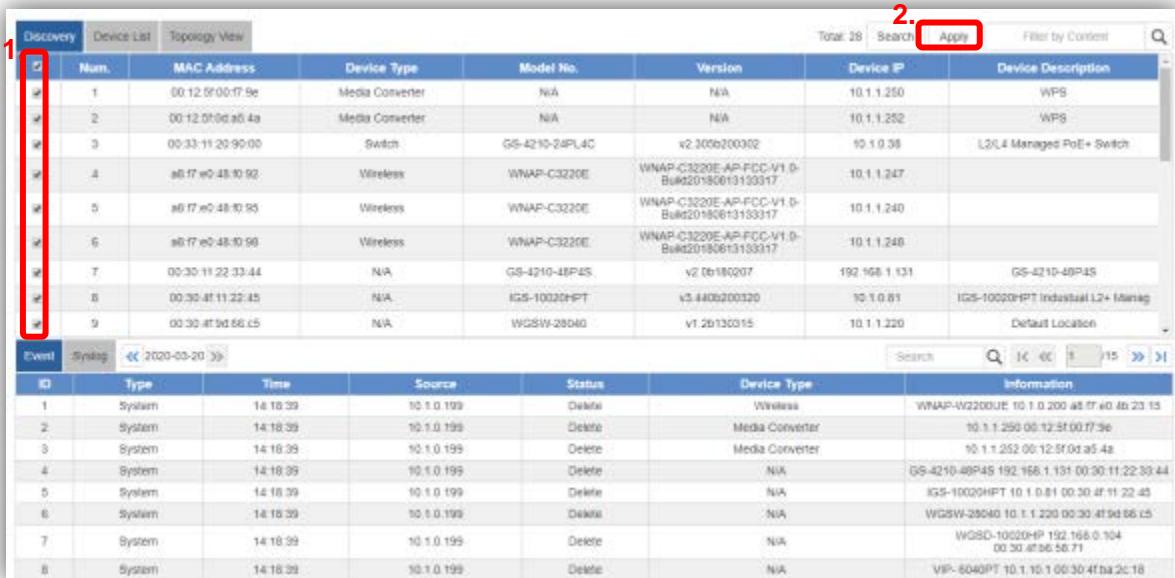

The screenshot shows two tabs: "Device List" and "Event".

Device List:

Num.	MAC Address	Device Type	Model No.	Version	Device IP	Device Description
1	00:12:00:00:17:9e	Media Converter	N/A	N/A	10.1.1.250	WP8
2	00:12:00:00:a6:4a	Media Converter	N/A	N/A	10.1.1.252	WP8
3	00:33:11:20:90:00	Switch	GS-4210-24PL4C	v2.305b200302	10.1.0.38	L2/L4 Managed PoE+ Switch
4	a6:17:e9:48:10:92	Wireless	WNAP-C3220E	WNAP-C3220E-AP-FCC-V1.0-Bulk20180613133317	10.1.1.247	
5	a6:17:e9:48:10:93	Wireless	WNAP-C3220E	WNAP-C3220E-AP-FCC-V1.0-Bulk20180613133317	10.1.1.240	
6	a6:17:e9:48:10:98	Wireless	WNAP-C3220E	WNAP-C3220E-AP-FCC-V1.0-Bulk20180613133317	10.1.1.248	
7	00:30:11:22:33:44	N/A	GS-4210-48P4S	v2.0b180207	192.168.1.131	GS-4210-48P4S
8	00:30:4f:11:22:45	N/A	IGS-10020HPT	v5.440b200320	10.1.0.81	IGS-10020HPT Industrial L2+ Managed PoE+ Switch
9	00:30:4f:9d:66:c5	N/A	WG5W-28040	v1.2b130315	10.1.1.220	Default Location


Event:

ID	Type	Time	Source	Status	Device Type	Information
1	System	14:18:39	10.1.0.199	Delete	Wireless	WNAP-WV2200UE 10.1.0.200:49.07:60.46.23.15
2	System	14:18:39	10.1.0.199	Delete	Media Converter	10.1.1.250:00.12.5f.00.77:9e
3	System	14:18:39	10.1.0.199	Delete	Media Converter	10.1.1.252:00.12.5f.00.85:48
4	System	14:18:39	10.1.0.199	Delete	N/A	GS-4210-48P4S:192.168.1.131:00.30.4f:11:22:33:44
5	System	14:18:39	10.1.0.199	Delete	N/A	IGS-10020HPT:10.1.0.81:00.30.4f:11:22:45
6	System	14:18:39	10.1.0.199	Delete	N/A	WG5W-28040:10.1.1.220:00.30.4f:9d:66:c5
7	System	14:18:39	10.1.0.199	Delete	N/A	WG5D-10020HPT:192.168.0.104:00.30.4f:96:58:71
8	System	14:18:39	10.1.0.199	Delete	N/A	VIP-5040PT:10.1.1.60:30.4f:ba:2c:18

Device List and Topology View

- ◆ Press “Device List” to see the device status.
 - ◆ Press “Topology View” to see the domain network topology after one minute.
- ※ If you do not see the topology, please check devices to enable SNMP and LLDP function.

Discovery Device List Topology View									Total: 7, Online: 7	Filter by Content	Search
	Status	Group	MAC Address	Device Type	Model No.	Version	IP Address	Device Description	Authorization Status	Action	
	00:30:4f:00:06:45		IP camera	ICA-3460V	N/A	1.0.0	192.168.1.177	PLANET			
	88:dc:96:56:7c:84		Wireless	WB8-502AC	1.0.0.11	192.168.1.172		WB8-502AC			
	ff:ff:8b:2b:00:45		Wireless	WNAP-W2201A	v1.3465cb170926	192.168.1.195		WNAP-W2201A			
	a8:17:e0:55:4f:7a		Wireless	WDAP-C7200E	WDAP-C7200E-AP-ETSI-V3.0-BuM4200321131724	192.168.1.129		C7200E_2F			
	a8:17:e0:90:2f:7b		Router	IVR-100	v1.19075200428	192.168.1.1		PLANET IVR-100 VPN Gateway			
	a8:17:e0:62:31:80		Industrial Switch	IGS-5225-BP4S	v3.4405250331	192.168.1.180		IE L2+ Managed PoE+ Switch			
	a8:17:e0:65:e3:ef		Switch	GS-4210-8P2S	v2.3051200330	192.168.1.148		L2/L4 Managed PoE Switch			

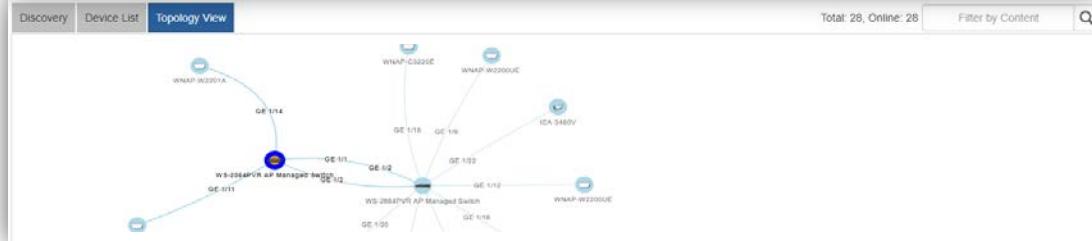

➤ **Authorization Status:** If the devices support MQTT protocol and are managed currently with NMS, the authorization status will show “Green Key”.

Key	Status
	Managed
	Not supported
	Managed Fail
	Managed by the other NMS

Device Identification

- ◆ Press the “Identification” icon to modify the device description, type, and web protocol information.

Device List Topology View

Total: 28, Online: 28 Filter by Content

ID	Status	Group	MAC Address	Device Type	Model No.	Version	IP Address	Device Description	Action
1	●	N/A	00:12:50:00:17:9e	Media Converter			10.1.1.250	WPS	
2	●	N/A	00:12:50:00:a5:4a	Media Converter			10.1.1.252	WPS	
3	●	N/A	00:30:11:22:33:44	N/A	IGS-4210-48P4S	v2.0b180207	192.168.1.131	IGS-4210-48P4S	
4	●	N/A	00:30:4f:11:22:45	N/A	IGS-10020HPT	v3.440b200320	10.1.0.81	IGS-10020HPT Industrial L2+ Managed	
5	●	N/A	00:30:4f:9d:66:c5	N/A	WG8W-28040	v1.2b130915	10.1.1.220	Default Location	
6	●	N/A	00:30:4f:b6:58:71	N/A	WG8D-10020HP	v3.340b160622	192.168.0.104	PLANET WG8D-10020HP Managed Swl	
7	●	N/A	00:30:4f:ba:2c:18	N/A	VIP-6040PT	VIMG-1.0.3.62	10.1.10.1	VIP-600	
8	●	N/A	00:30:4f:ba:2c:19	N/A	VIP-6040PT	VIMG-1.0.3.62	10.1.10.2	VIP-600	
9	●	N/A	00:90:ef:fe:1a:18	N/A	WIRE-1200	v4.0N010r	10.1.10.300	WIRE-1200	

Event System 2020-03-20 09:45:21 21

ID	Type	Time	Source	Status	Device Type	Information
1	System	14:24:02	10.1.0.199	Connected	N/A	VGW-800 10.1.10.250 00:30:4f:ba:2c:18
2	System	14:24:02	10.1.0.199	Connected	N/A	IGS-4210-48P4S 192.168.1.131 00:30:11:22:33:44
3	System	14:24:02	10.1.0.199	Connected	N/A	IGS-10020HPT 10.1.0.81 00:30:4f:11:22:45
4	System	14:24:02	10.1.0.199	Connected	N/A	IGS-4210-8P2T2S 192.168.0.100 00:40:4c:00:00:00
5	System	14:24:02	10.1.0.199	Connected	N/A	WG8D-10020HP 10.1.0.203 ab77e0:1f:22:42
6	System	14:24:02	10.1.0.199	Connected	N/A	WG8W-28040 10.1.1.220 00:30:4f:9d:66:c5
7	System	14:24:02	10.1.0.199	Connected	N/A	FGSD-1008HPS 10.20.20.20.66:09:07:03:04:09
8	System	14:24:02	10.1.0.199	Connected	N/A	WIRE-1200 10.1.1.241 ab77e0:20:ab:9e

System Event

- ◆ Press the “Event” icon (No. 1) to see the full system event by day.
- ◆ Press the “<<” & “>>” icon (No. 2) to select daily report.



The screenshot shows a network management interface with a table of system events. The top navigation bar includes tabs for Discovery, Device List, and Topology View. The main table has columns for ID, Type, Time, Source, Status, Device Type, and Information. A secondary table below shows detailed event logs. Numbered callouts point to specific elements: 1 points to the 'Event' button in the top-left of the main table, and 2 points to the date range selector '2020-03-20'.

ID	Type	Time	Source	Status	Device Type	Information
1	System	14:24:02	10.1.0.199	Connected	N/A	VGW-800 10.1.10.250 00:30:40:00:00:18
2	System	14:24:02	10.1.0.199	Connected	N/A	GS-4210-48P4S 192.168.1.131 00:30:11:22:33:44
3	System	14:24:02	10.1.0.199	Connected	N/A	IGS-10020HPT 10.1.0.81 00:30:41:11:22:45
4	System	14:24:02	10.1.0.199	Connected	N/A	GS-4210-8P2S 192.168.0.100 00:e0:4c:00:00:00
5	System	14:24:02	10.1.0.199	Connected	N/A	GS-4210-8P2S 10.1.0.203 00:17:e0:17:22:42
6	System	14:24:02	10.1.0.199	Connected	N/A	WGSW-28040 10.1.1.220 00:30:4f:98:66:c5
7	System	14:24:02	10.1.0.199	Connected	N/A	FGSD-10020HPS 10.20.20.20 00:09:07:03:04:29
8	System	14:24:02	10.1.0.199	Connected	N/A	WRE-1200 10.1.1.241 00:17:e0:20:a9:9e

System Event

- ◆ Use “search” to choose the information you want by entering the key word.

Discovery Device List Topology View Total: 26, Online: 26 Filter by Content 

#	Status	Group	MAC Address	Device Type	Model No.	Version	IP Address	Device Description	Action
1		N/A	00:12:01:00:ff:9e	Media Converter			10.1.1.250	WPS	
2		N/A	00:12:01:00:a5:4a	Media Converter			10.1.1.252	WPS	
3		N/A	00:30:11:22:35:44	N/A	GS-4210-48P4S	v2.0b160207	192.168.1.131	GS-4210-48P4S	
4		N/A	00:30:4f:11:22:45	N/A	IG8-10020HPT	v3.440b200320	10.1.0.81	IG8-10020HPT Industrial L2+ Managed	
5		N/A	00:30:4f:98:66:c5	N/A	WG8W-28040	v1.2b130315	10.1.1.220	Default Location	
6		N/A	00:30:4f:b6:58:71	N/A	WG8D-10020HP	v3.340160622	192.168.0.104	PLANET WG8D-10020HP Managed SWI	
7		N/A	00:30:4f:ba:2c:18	N/A	VIP-6040PT	vIMG-1.0.3.62	10.1.10.1	VIP-860	
8		N/A	00:30:4f:ba:2c:19	N/A	VIP-6040PT	vIMG-1.0.3.62	10.1.10.2	VIP-860	
9		N/A	00:30:4f:ba:2c:1a	N/A	WG8W-28040	v1.2b130315	10.1.10.240		


Event	System	2020-03-20 19:19:19	IG8	<input type="text"/>	<<	>>	1	2	3	
ID	Type	Time	Source	Status	Device Type	Information				
1	System	14:24:02	10.1.0.199	Connect	N/A	IG8-10020HPT 10.1.0.81 00:30:4f:11:22:45				
2	System	14:23:55	10.1.0.199	Add	N/A	IG8-10020HPT 10.1.0.81 00:30:4f:11:22:45				
3	System	14:18:39	10.1.0.199	Delete	N/A	IG8-10020HPT 10.1.0.81 00:30:4f:11:22:45				
4	System	14:18:00	10.1.0.199	Connect	N/A	IG8-10020HPT 10.1.0.81 00:30:4f:11:22:45				
5	System	14:18:00	10.1.0.199	Connect	N/A	IG8-10020HPT 10.1.0.81 00:30:4f:11:22:45				
6	System	14:15:01	10.1.0.199	Connect	N/A	IG8-10020HPT 10.1.0.81 00:30:4f:11:22:45				
7	System	14:14:00	10.1.0.199	Connect	N/A	IG8-10020HPT 10.1.0.81 00:30:4f:11:22:45				
8	System	13:51:01	10.1.0.199	Connect	N/A	IG8-10020HPT 10.1.0.81 00:30:4f:11:22:45				
9	System	13:50:33	10.1.0.199	Add	N/A	IG8-10020HPT 10.1.0.81 00:30:4f:11:22:45				

Copyright © PLANET Technology Corporation. All rights reserved.

Syslog Server

- ◆ Press the “Syslog” icon (No. 1) to see the full syslog by day (Open the devices remote syslog function.).
- ◆ Press the “<<” & “>>” icon (No. 2) to select daily report.
- ◆ Press the “Drop-down ” menu (No. 3) to select severity and device ID.

1. 2. 3.

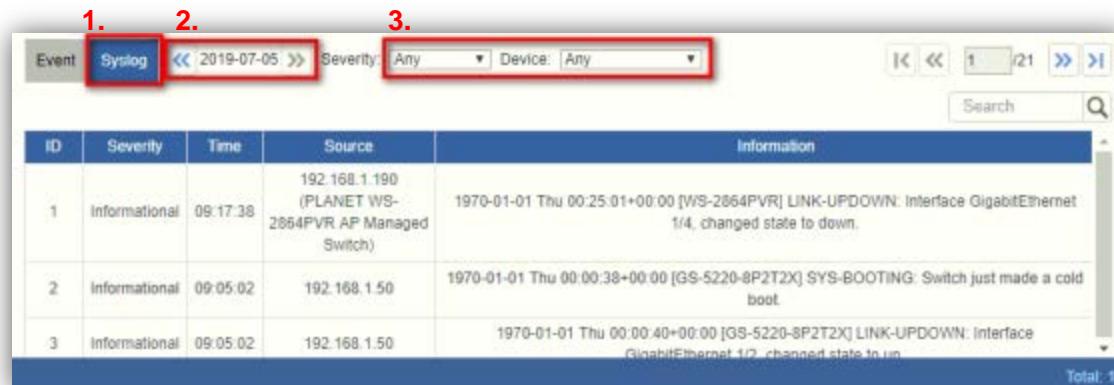


ID	Severity	Time	Source	Information
1	Informational	09:17:38	192.168.1.190 (PLANET WS-2864PVR AP Managed Switch)	1970-01-01 Thu 00:25:01+00:00 [WS-2864PVR] LINK-UPDOWN: Interface GigabitEthernet 1/4, changed state to down.
2	Informational	09:05:02	192.168.1.50	1970-01-01 Thu 00:00:38+00:00 [GS-5220-8P2T2X] SYS-BOOTING: Switch just made a cold boot.
3	Informational	09:05:02	192.168.1.50	1970-01-01 Thu 00:00:40+00:00 [GS-5220-8P2T2X] LINK-UPDOWN: Interface GigabitEthernet 1/2, changed state to up.

Total: 14

Syslog Server

- ◆ Use **Search** to choose the information you want by entering the key word.

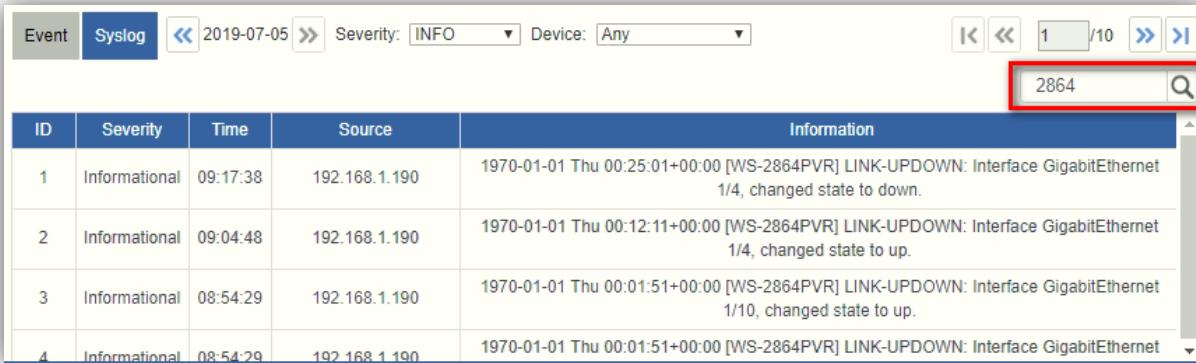

ID	Severity	Time	Source	Information
1	Informational	09:17:38	192.168.1.190	1970-01-01 Thu 00:25:01+00:00 [WS-2864PVR] LINK-UPDOWN: Interface GigabitEthernet 1/4, changed state to down.
2	Informational	09:04:48	192.168.1.190	1970-01-01 Thu 00:12:11+00:00 [WS-2864PVR] LINK-UPDOWN: Interface GigabitEthernet 1/4, changed state to up.
3	Informational	08:54:29	192.168.1.190	1970-01-01 Thu 00:01:51+00:00 [WS-2864PVR] LINK-UPDOWN: Interface GigabitEthernet 1/10, changed state to up.
4	Informational	08:54:29	192.168.1.190	1970-01-01 Thu 00:01:51+00:00 [WS-2864PVR] LINK-UPDOWN: Interface GigabitEthernet



SYSTEM MENU- AP CONTROL

AP Control UI – Structure & Description


AP control icon



The screenshot shows the PLANET AP Control UI interface. At the top, there is a header with the PLANET logo, device counts (28 devices, 14 clients, 0 groups), and a search bar. Below the header is a navigation menu with five items: 1. Preference, 2. Profiles, 3. Control, 4. Map It, and 5. Statistics. The 'Control' item is highlighted with a yellow box. To the right of the menu is a toolbar with various icons. The main area is titled 'Main Menu' and shows a table for 'AP Management'. The table has columns for Status, Group, MAC Address, Device Type, Model No., Version, IP Address, Device Description, and Action. There are three rows of data, each representing an AP with a green status icon and a MAC address starting with 'a8:17:e0:48:f0'. The 'Action' column contains icons for edit, delete, and other management functions.

Item	Description	Remarks
1	Preference	Edit region, RO community, RW community
2	Profiles	Set up SSID, Radio (2.4G, 5G) Profiles
3	Control	AP and AP group management
4	Map It	Edit the map of AP location and coverage
5	Statistics	Show the statuses of managed APs and active clients

Main Menu – Preference

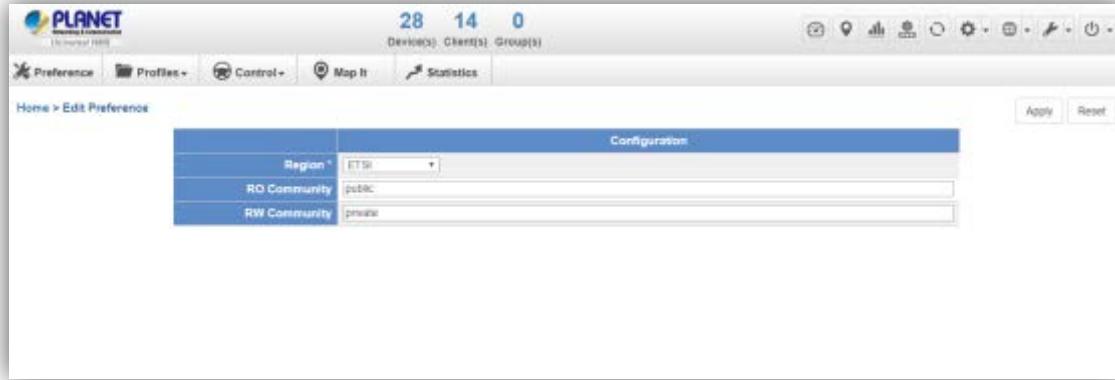

[Preference]

- **Preference:** On this page, you can choose the device region of FCC or ETSI.
- Then edit RO community and RW community for public or private use.
- Select Apply or Reset.
- Noted: Device of FCC and device of ETIS cannot be shown at the same time.

Main Menu – Profiles

Preference | Search | Profiles | Control | Map It | Statistics

Home > SSID Profile > SSID


	Num.	Model No.	SSID Name	SSID Broadcast	Security	Encryption	Client Isolation	Action
1	1	WBS-502N	6F Customer	Enabled	WPA-Mixed	Personal (Pre-Shared Key)	Enabled	
2	2	WBS-502N	Btest 502N	Enabled	WPA2	Personal (Pre-Shared Key)	Disabled	
3	3	WBS-502N	PLANET 7F	Enabled	WPA-EAP	Enterprise (RADIUS)	Enabled	
4	4	WBS-502N	Test 502N	Enabled	WPA	Personal (Pre-Shared Key)	Enabled	
5	5	WNAP-C3220A	3F_C3220A	Enabled	WPA2	Personal (Pre-Shared Key)	Enabled	
6	6	WNAP-C3220A	Test C3220A	Enabled	Disable	Disabled	Disabled	
7	7	WNAP-C3220E	Test C3220E	Enabled	WPA-EAP	Enterprise (RADIUS)	Disabled	
8	8	WNAP-W2200UE	1F_W2200UE	Enabled	WPA	Personal (Pre-Shared Key)	Disabled	
9	9	WNAP-W2200UE	PLANET 7F	Enabled	WPA2	Personal (Pre-Shared Key)	Enabled	
10	10	WNAP-W2200UE	Test W2200UE	Enabled	WPA2	Personal (Pre-Shared Key)	Enabled	

Total Profile: 10

[Profiles]

- **Profiles:** On this page, you can create the SSID and 2.4GHz/5GHz profiles for further AP provisioning.
- **SSID Profiles:** Click the “Add new profile” button to add a new SSID profile.
- **Radio Profiles:** Click the “Add new profile” button to add a new 2.4GHz radio profile or 5GHz radio profile.
- You can create up to 32 profiles for each type of profiles (SSID, 2.4G radio, 5G radio).


Main Menu – Profiles

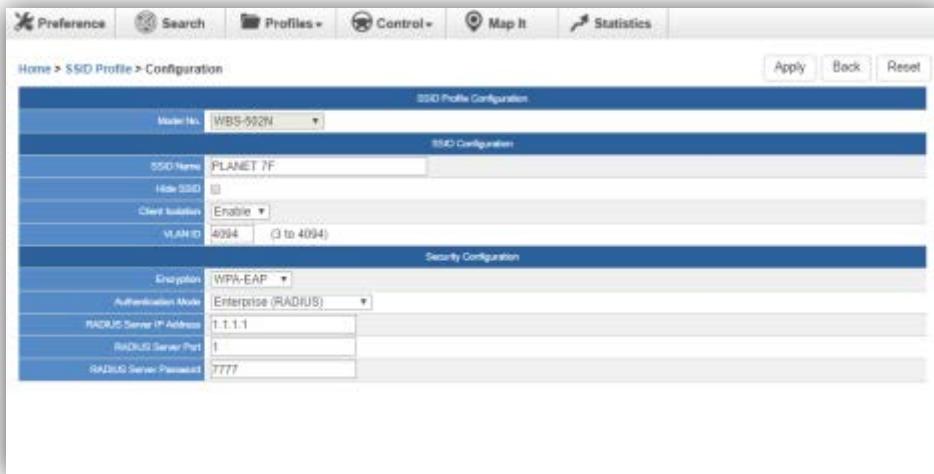

[SSID Profile Configuration]

- On the SSID profile configuration page, enter the value that you preferred and then click “Apply” to save the profile.
-  Add new profile: Click it to add a new profile.
-  Delete selected item: Click it to delete the selected profile.
-  Edit: Click it to edit the profile.
-  Delete: Click it to delete the single profile.
- Filter: You can filter the search result by entering the keywords in the field next to the magnifier icon. The keywords include: SSID Name

Main Menu – 3/Profiles

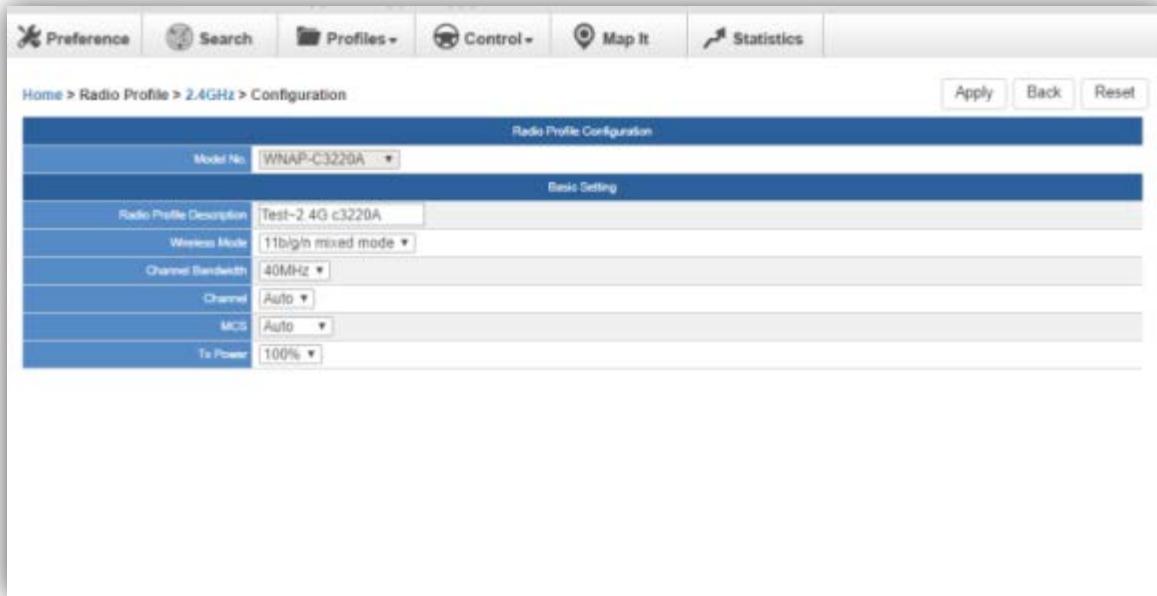

The screenshot shows the 'Radio Profile Configuration' page for the '2.4GHz' band. The top navigation bar includes links for Preference, Search, Profiles, Control, Map It, and Statistics. The main content area displays configuration settings for a selected model (WNAP-C3220A). The 'Basic Setting' section contains the following fields:


Setting	Value
Radio Profile Description	Test-2.4G c3220A
Wireless Mode	11b/g/n mixed mode
Channel Bandwidth	40MHz
Channel	Auto
MCS	Auto
Tx Power	100%

Buttons at the bottom right of the configuration form include 'Apply', 'Back', and 'Reset'.

[2.4GHz Radio Profile Configuration]

- On the Radio profile configuration page, enter the value that you preferred and then click “Apply” to save the profile.
- Apply: Click this button to save the settings.
- Back: Click this button to return to the previous page.
- Reset: Click this button to reset all fields to default value.

Main Menu – 3/Profiles

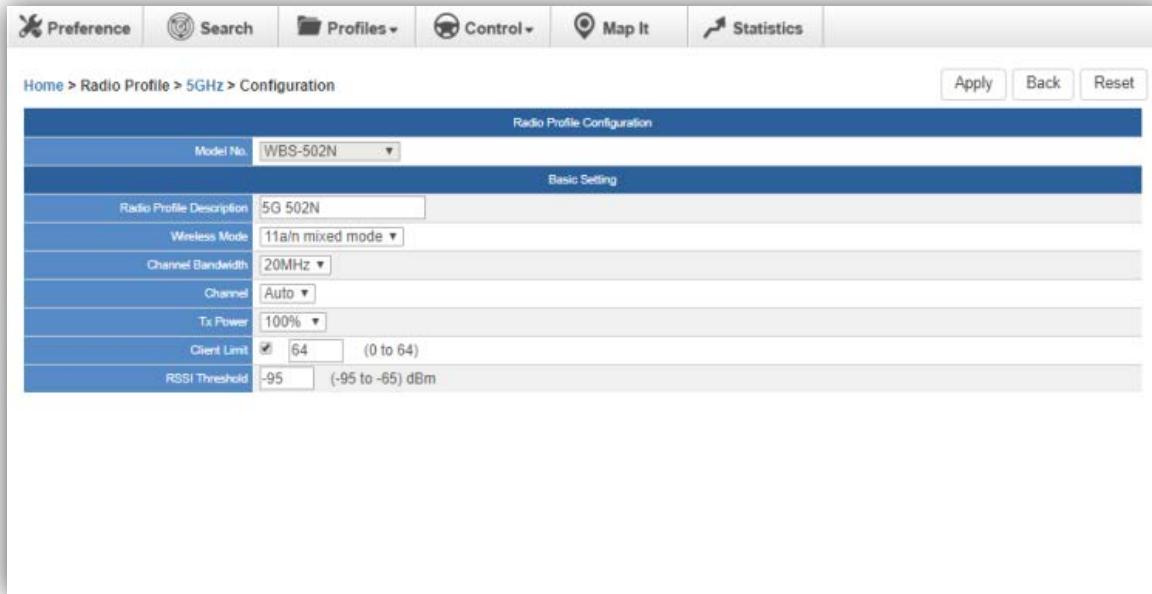

The screenshot shows the 'Radio Profile Configuration' page for a 'WBS-502N' model. The 'Basic Setting' tab is selected. The configuration fields are as follows:

- Model No.: WBS-502N
- Radio Profile Description: 5G 502N
- Wireless Mode: 11a/n mixed mode
- Channel Bandwidth: 20MHz
- Channel: Auto
- Tx Power: 100%
- Client Limit: 64 (0 to 64)
- RSSI Threshold: -95 (-95 to -65) dBm


Buttons at the top right include 'Apply', 'Back', and 'Reset'.

[5GHz Radio Profile Configuration]

➤ **Remarks:**

1. Strongly suggest you to keep the values as default except the fields like Channel, Network Mode, Channel Bandwidth, Tx Power, IAPP, and Tx/Rx to prevent any unexpected error or impact on the performance.
2. WMM Capable is not allowed to be disabled.

Main Menu – Control

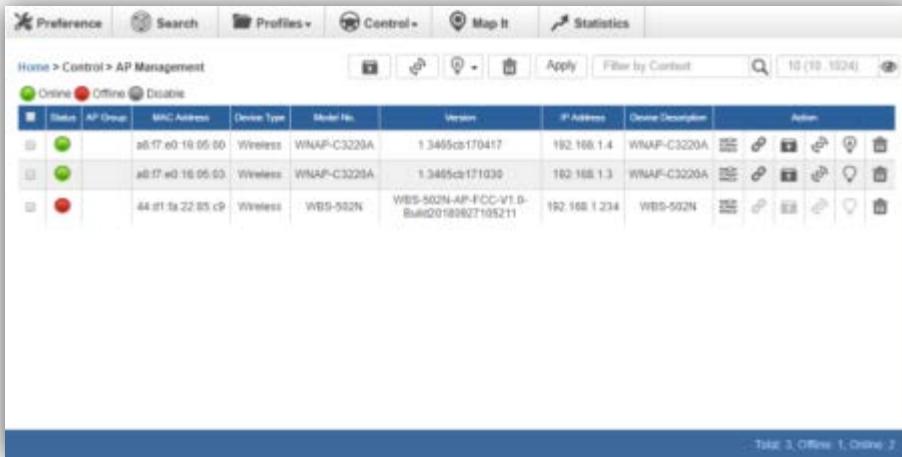

The screenshot shows the AP Management page under the Control menu. It lists three AP devices:

	Status	AP Group	MAC Address	Device Type	Model No.	Version	IP Address	Device Description	Action
1	Online		a8:17:e0:18:05:b0	Wireless	WNAP-C3220A	1.3465cb170417	192.168.1.4	WNAP-C3220A	
2	Online		a8:17:e0:18:05:b0	Wireless	WNAP-C3220A	1.3465cb171030	192.168.1.3	WNAP-C3220A	
3	Offline		44:0f:1a:22:85:c9	Wireless	WBS-502N	WBS-502N-AP-FCC-V1.0-Build0201809027105211	192.168.1.234	WBS-502N	

Total: 3, Offline: 1, Online: 2

[Control - AP Management]

- **Control:** On this page, the system allows you to control the AP or AP group with specific actions.
- **AP Management:** Go to this page to control single AP or multiple APs.
- **AP Group Management:** Go to this page to create multiple APs as a group or control AP group.
- **Filter:** You can filter the AP list by entering the keyword in the field next to the magnifier icon. The keyword should be in any context that belongs to the fields like AP Group, MAC Address, Model, Version, IP Address, and Name.
- **Apply:** Click this button to apply the setting. The profile setting will not take effect until you click the “Apply” button on the Control’s main page.

Main Menu – Control

➤ Status:

-    Connection status: online, offline, Wi-Fi disabled
-  In progress: action in progress
-  Finished/Successful: action finished and successful.
-  Failed: action failed.

➤ Action:


-  Setting: edit setting and allocate profile to AP
-  Link: link to the AP's web page
-  Firmware Update: Upgrade AP's firmware
-  Reboot: Reboot the AP
-  Delete: Delete the AP from the control list
-  LED Control: Control the AP's LED.
Mouse-click in a sequential order:
LED blink-> LED off-> LED on

➤ Remarks:

To configure multiple APs at one time, select multiple APs and then choose one of the action icons on the top of the page.

The "Link" action is not allowed for multiple APs.

Main Menu – Control

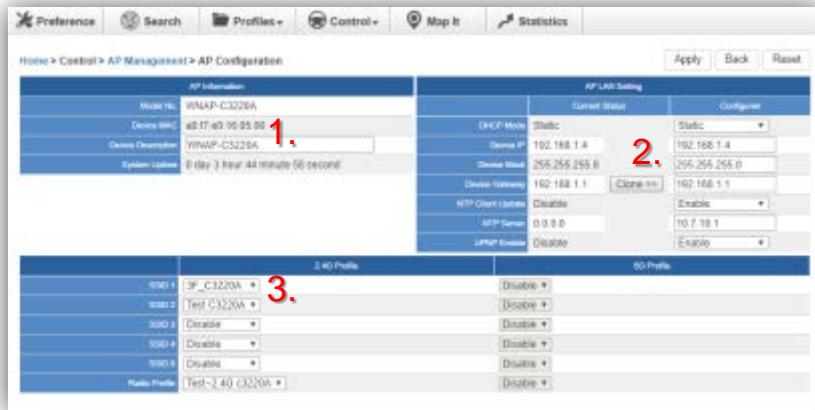

[AP Configuration]

- On the AP Group Configuration page, you can create an AP group with the same model of AP.
- Save: Click this button to save the group/setting.
- Back: Click this button to return to the previous page.
- Reset: Click this button to reset all fields to default value.
- Remarks: The system allows to create up to 32 AP groups.

➤ Procedure of configuring AP's setting:

1. Edit the basic AP Information.
2. Click the “Clone >>” button if you want to use the same IP configuration as the previous LAN settings. Otherwise, please enter the preferred LAN setting.
3. If there are already profiles created, you can designate the SSID profile and Radio profile to this AP. You can do this step later once AP's basic setting is done

Main Menu – Control



The screenshot shows a software interface titled "AP Group Management". At the top, there are tabs for Preference, Search, Profiles, Control, Map It, and Statistics. Below the tabs, the path "Home > Control > AP Group Management" is displayed. A search bar and a filter button ("Filter by Control") are present. On the right, there is a search icon and a page number "10 (10, 120)". The main area contains a table with columns: Num, Group Name, Group Description, and Action. Two rows are listed: Row 1 has Num 1, Group Name 2200UE G, Group Description 2200UE Group, and Action icons. Row 2 has Num 2, Group Name c3220a G1, Group Description C3220A GROUP, and Action icons. A blue footer bar at the bottom shows the text "[3/Control - AP Group Management]".

[3/Control - AP Group Management]

➤ Remarks:


To do profile provisioning to multiple AP groups at one time, select multiple AP groups, and then click the “Apply” button.

The "Link" action is not allowed for multiple APs or AP group.

- On the AP Group Management page, you can create AP group and control one or more AP groups.
-  Add new group: Click it to add an AP group.
-  Delete selected item: Click it to delete the selected AP group.
- Apply: Click this button to apply the setting. The profile setting will not take effect to a group until you click the “Apply” button.

Main Menu – Control

Home > Control > AP Management

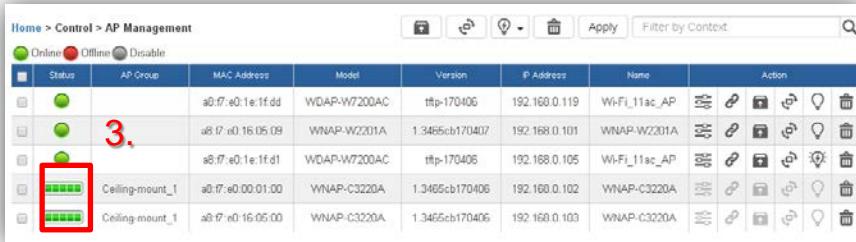

Status	AP Group	MAC Address	Model	Version	IP Address	Name	Action
Online	3.	a0:ff:e0:1e:ff:dd	WDAP-W7200AC	tftp-170406	192.168.0.119	Wi-Fi_11ac_AP	
Online		a8:ff:e0:16:05:09	WNAP-W2201A	1.3485cb170407	192.168.0.101	WNAP-W2201A	
Online		a8:ff:e0:1e:ff:d1	WDAP-W7200AC	tftp-170406	192.168.0.105	Wi-Fi_11ac_AP	
Online	Ceiling-mount_1	a0:ff:e0:00:01:00	WNAP-C3220A	1.3485cb170406	192.168.0.102	WNAP-C3220A	
Online	Ceiling-mount_1	a0:ff:e0:16:05:00	WNAP-C3220A	1.3485cb170406	192.168.0.103	WNAP-C3220A	

➤ Procedure of profile provisioning to AP groups:

1. Select the AP group.
2. Click the “Apply” button.
3. Go to “3/Control-> AP Management” to check whether the status is becoming “In progress”. Wait until the status comes “Online”.

➤ Action:

- Setting: Edit setting and allocate profile to group
- Firmware Update: Upgrade AP group's firmware
- Reboot: Reboot the AP group
- Delete: Delete the AP group from the control list
- LED Control: Control the AP group's LED.

Mouse-click in a sequential order:

LED blink-> LED off-> LED on

Main Menu – Map It



[Map It]

- **Map It:** On this page, the system allows you to upload your floor map to the system and you can add managed APs to the actual position against the floor map. This is convenient to user to view and adjust the actual deployment by reference to its real transmission power and channel allocation.
- The system allows user to upload up to 10 floor maps.

*Please use mouse to use this function.

- A system message will prompt to remind you to edit map first if there is no other map available in the system. Click “OK” to continue.




- On the Edit Map page, click “Choose File” and enter the map’s description. Then click “Apply” to upload the map.




Main Menu – Map It

- After finishing map uploading, you can click the sidebar at the left-side of the window to expand the AP list.

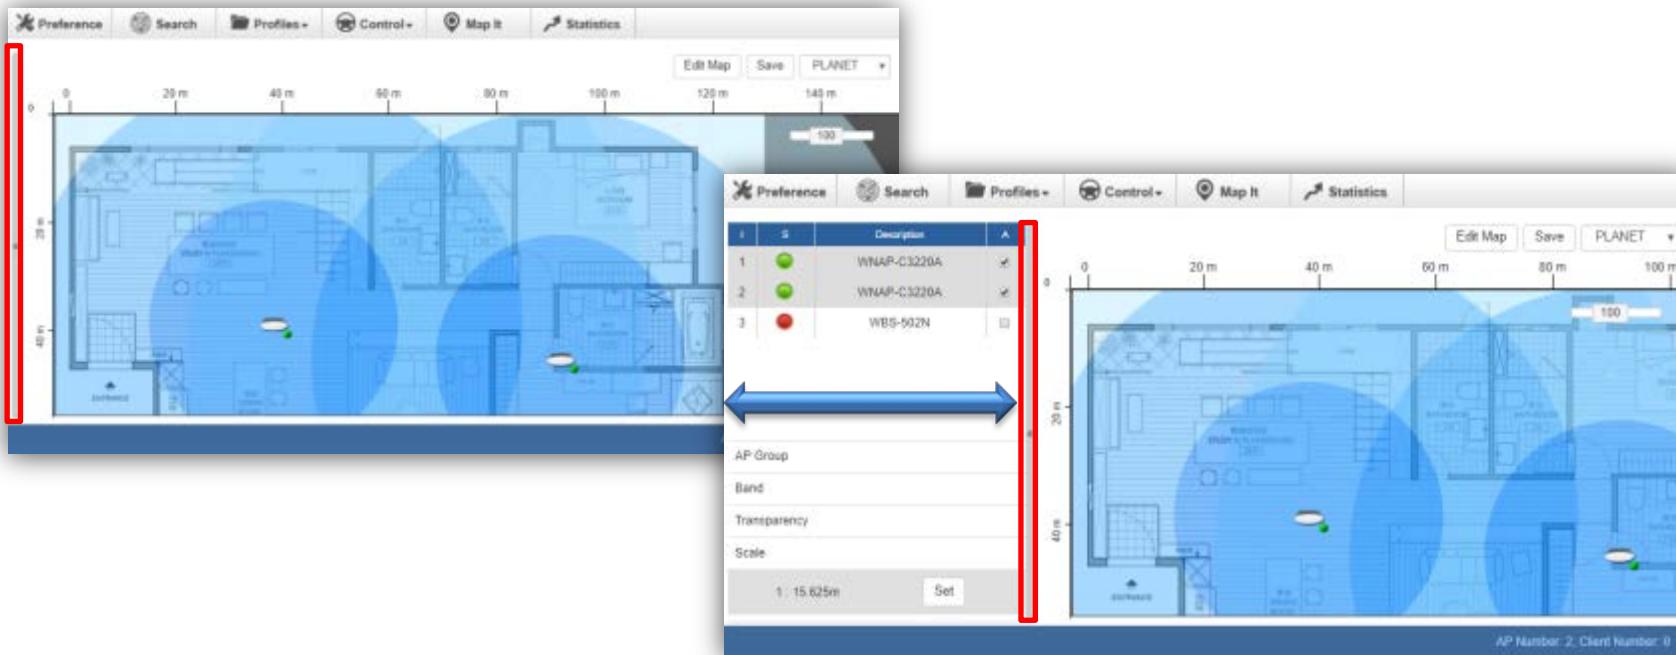


Main Menu – Map It

- Setting Scale: 1. Click “Scale” to start to reset the map scale.


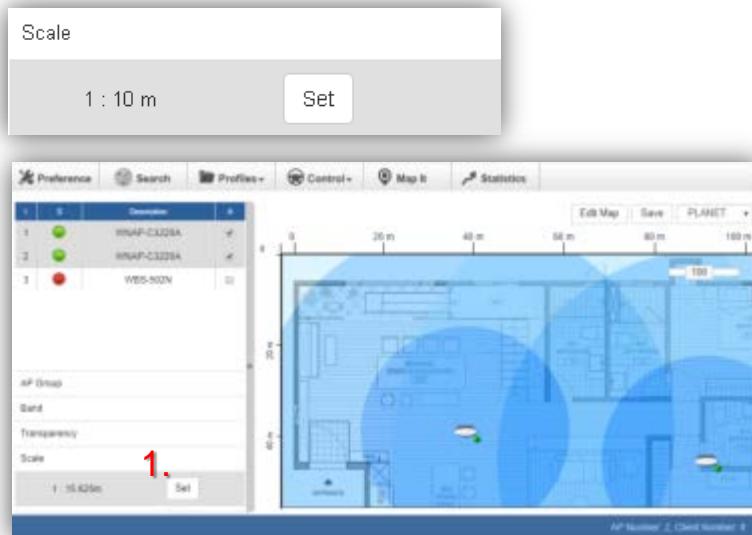


- Press the “Set” button to draw a line on the map. Fill its physical distance in the blank and press “Set” or “Cancel”. For example, in the graph below, set the door width to 0.8 m.

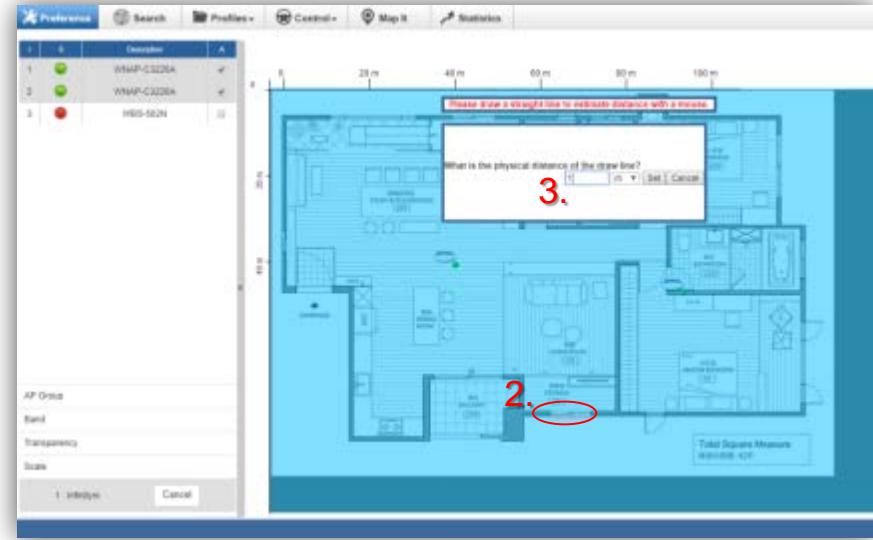


Main Menu – Map It

- Drag and drop the AP onto the map or select multiple APs by clicking the checkbox.

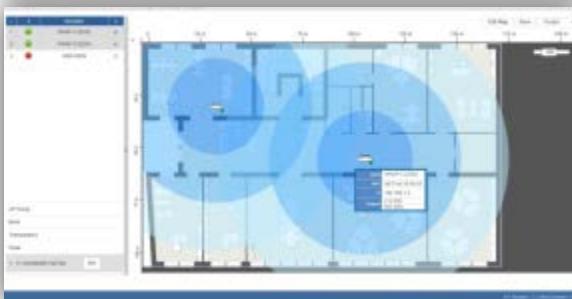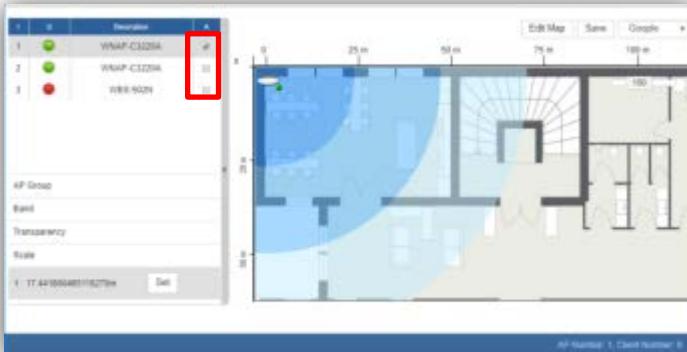


- Once the allocation is done, click "Save" to save the setting.

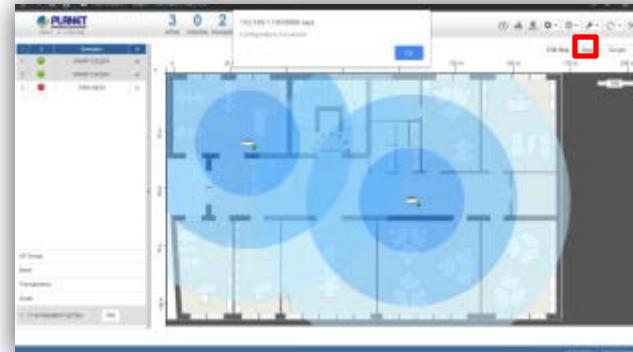


- To upload more maps or edit current map, click the "Edit Map" button to re-enter the Edit Map page.

Main Menu – Map It


 
- The lower-left side area provides map control options.
- AP Group: To filter the managed APs shown on the map, the selected AP group is displayed.




- Band: Select “2.4GHz” to show APs with 2.4GHz frequency or select “5GHz” to show APs with 5GHz frequency.

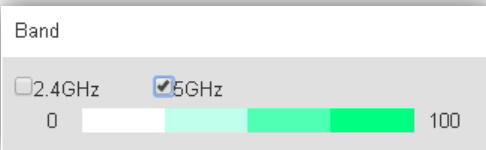

- Transparency: Slide the bar to adjust the transparency of the map.

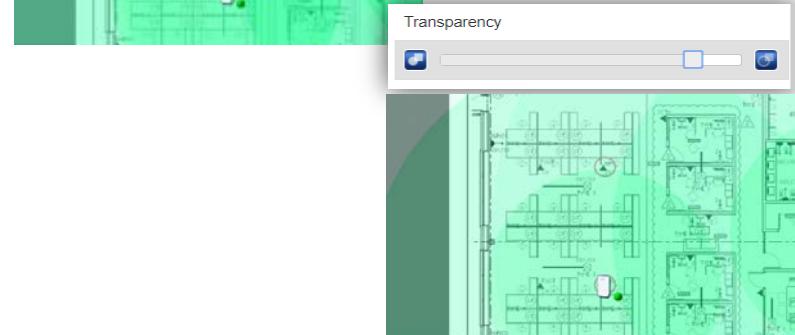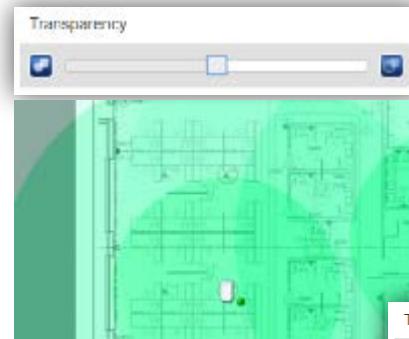

Main Menu – Statistics

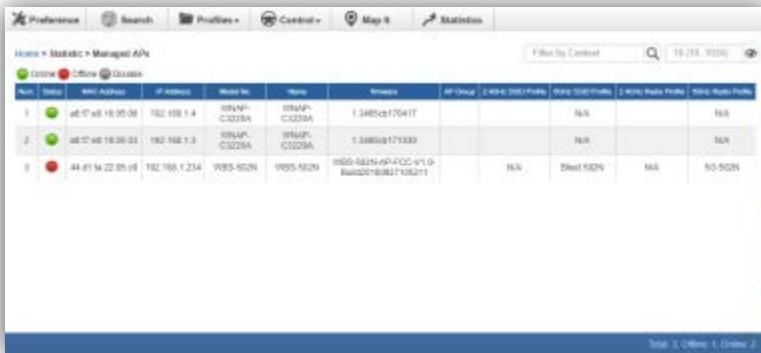


This screenshot shows the 'Statistics - Managed APs' page. At the top, there are tabs for Preference, Search, Profiles, Control, Map It, and Statistics. Below the tabs is a search bar with the placeholder 'Filter by Content' and a magnifying glass icon. A date range selector shows '10/18/2018'. The main area is a table with the following columns: Name, Status, IP Address, Model No., Name, Antenna, AP Group, 2.4GHz Radio Profile, 5GHz Radio Profile, and Dual Radio Profile. The table contains three rows of data:

Name	Status	IP Address	Model No.	Name	Antenna	AP Group	2.4GHz Radio Profile	5GHz Radio Profile	Dual Radio Profile
1	Online	192.168.1.4	BRMAP-C020BA	BRMAP-C020BA	1.3485cb170417	N/A	N/A	N/A	N/A
2	Online	192.168.1.3	BRMAP-C020BA	BRMAP-C020BA	1.3488ca121803	N/A	N/A	N/A	N/A
3	Offline	192.168.1.234	WRS5629	WRS5629	1920-0000-nP-FOC-v1.0-Baud21882705211	N/A	Dual 5029	N/A	50-5029

Total: 3 Online, 1 Offline

[Statistics – Managed APs]

- **Managed APs:** On this page, you can observe the current configuration of all managed APs.
- **Filter:** You can filter the AP list by entering the keyword in the field next to the magnifier icon. The keyword should be in any context that belongs to the fields of this page.

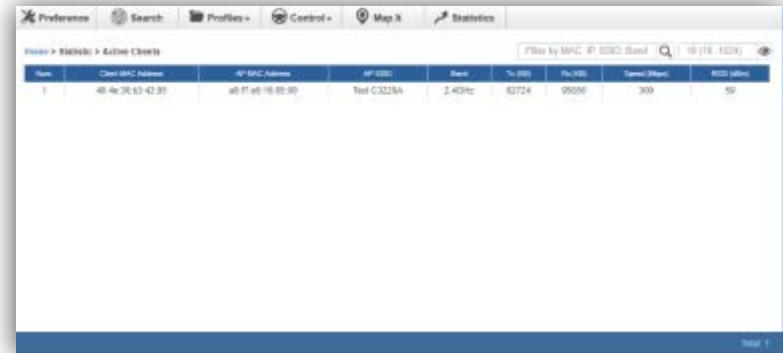

This screenshot shows the 'Statistics - Active Clients' page. At the top, there are tabs for Preference, Search, Profiles, Control, Map It, and Statistics. Below the tabs is a search bar with the placeholder 'Filter by MAC, IP, SSID, Band' and a magnifying glass icon. A date range selector shows '10/18/2018'. The main area is a table with the following columns: Name, Client MAC Address, AP MAC Address, AP SSID, Band, % (B), Rx (B), Tx (B), and RSSI (dBm). The table contains one row of data:

Name	Client MAC Address	AP MAC Address	AP SSID	Band	% (B)	Rx (B)	Tx (B)	RSSI (dBm)
1	48-4e-3d-82-42-31	48-4e-3d-82-42-31	Test C021BA	2.4GHz	82724	99999	300	-55

Total: 1


[Statistics – Active Clients]

- **Active Clients:** On this page, you can observe the statuses of all associated clients including traffic statistics, transmission speed and RSSI signal strength.
- **Filter:** You can filter the search result by entering the keywords in the field next to the magnifier icon. The keywords include MAC Address, IP Address, SSID and Band.



SYSTEM MENU – REFRESH

System Menu – Refresh

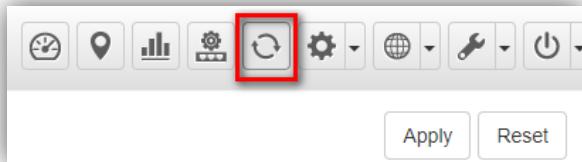


[System Menu – Refresh]

- **Refresh:** The page content will be updated every 1 minute automatically by default. If you require the system to update immediately, you may click “Manually” to refresh the page content.



SYSTEM MENU - SYSTEM CONFIGURATION

System Menu – System Configuration

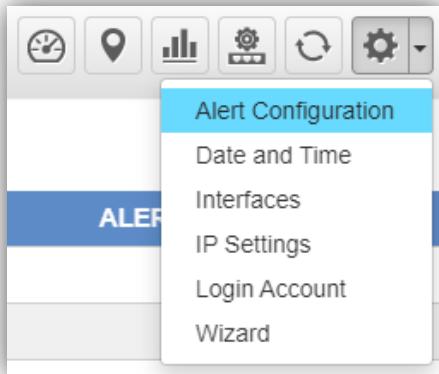

[System Menu – System Configuration]


- **Alert Configuration:** On this page, you can configure the system event notice enable or disable by Popup Alert Message and SMTP function.
- After configuration is done, click “Apply” to apply the setting.

Home > Alert Configuration

	ENABLE	ALERT_MESSAGE	SMTP
System Start	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
System Shutdown	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
System Reboot	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
System Firmware Upgrade Successful	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
System Firmware Upgrade Fail	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Management Add Device	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Management Delete Device	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Management Device Connect	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Management Device Disconnect	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Management Device Set Profile	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Management Device Profiles Setting Done	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Management Device Profiles Setting Failed	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Web Login	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>

[Alert Configuration]

System Menu – System Configuration

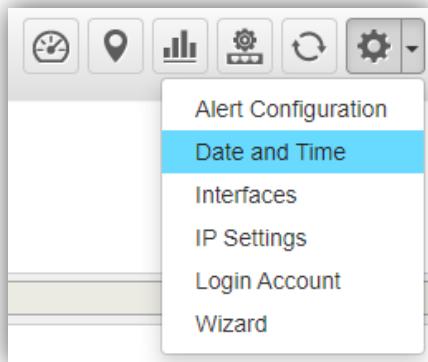

[System Menu – System Configuration]

Home > System > Date & Time


Time Configuration

Current Date and Time	2020-03-20 15:19:06
Time Mode Setting	<input checked="" type="radio"/> Auto <input type="radio"/> Manual
Time Zone	Asia <input type="button" value="▼"/> Taipei <input type="button" value="▼"/>
Server1	pool.ntp.org
Server2	europe.pool.ntp.org
Server3	north-america.pool.ntp.org
Server4	asia.pool.ntp.org
Server5	oceania.pool.ntp.org

Apply Reset

[Date and Time configuration]

System Menu – System Configuration

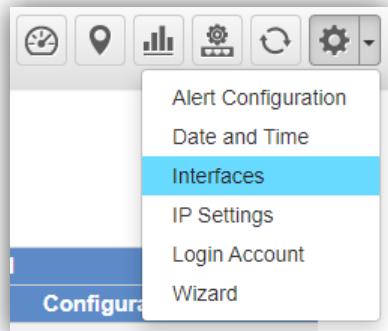

- **Interface:** On the PORT page, you can see each Port status and you can configure the speed for down, auto, 10/100 Mbps HDX/FDX, and 1GMbps FDX on the Port Statistics page.
- Click “Apply” to apply the setting.

[System Menu – System Configuration]

Port Configuration		Port Statistics		
Port	Port Description	Link	Speed	
			Current	Configuration
1		🔴	Down	Auto ▾
2		🟢	1Gbps FDX	Auto ▾


[Port Settings]

System Menu – System Configuration

Port Configuration		Port Statistics							
Port	Packets		Bytes		Errors		Drops		
	Received	Transmitted	Received	Transmitted	Received	Transmitted	Received	Transmitted	
1	0	0	0	0	0	0	0	0	0
2	478835	169696223	156746461	23195	0	420366	5201	0	0

[Port Statistics information]

System Menu – System Configuration

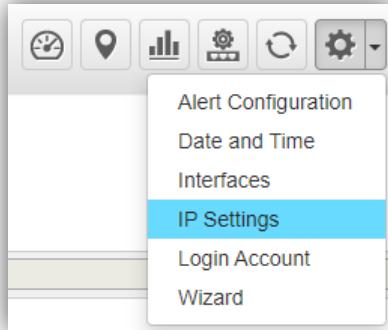

- **IP Settings:** On this page, you can configure the static ID of SAPC or choose it as DHCP client.
- After configuration is done, click “Apply” to apply the setting. The window will prompt you to change network setting that will cause the system to restart.

[System Menu – System Configuration]


Home > System > IP Settings

	Configuration	Status
Mode	Static IP	Static
IP Address	10.1.0.199	10.1.0.199
Subnet Mask	255.255.254.0	255.255.254.0
Default Gateway	10.1.1.254	10.1.1.254
DNS Server 1	10.1.1.3	10.1.1.3
DNS Server 2	10.1.1.4	10.1.1.4

Apply Reset

[IP Settings]

System Menu – System Configuration

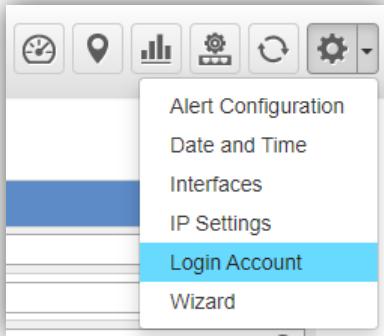

- **Login Account:** On this page, you can modify the login user name and password.
- Enter the new user name and new password directly in the corresponding fields, and then click “Apply” to apply the setting. The login window will be prompted to ask you to enter the new account to re-log in the system.

[System Menu – System Configuration]

Home > System > Edit User


Configuration	
User Name	<input type="text" value="admin123"/>
Password	<input type="password"/>
Retype Password	<input type="password"/>

*Please key in a new account, except using "admin"
New Password must be included at least 1*[a~z], 1*[A~Z], 1*[0~9], 1*[~, !, @, ...] and must contain at least 8 characters.

[Login Account]

- ◆ *Please key in a new account, except using "admin"
- ◆ New Password must include at least 1*[a~z], 1*[A~Z], 1*[0~9], 1*[~, !, @, ...] and must contain at least 8 characters.

System Menu – System Configuration

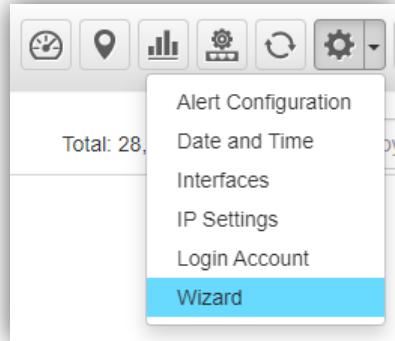


- [Wizard](#): Select Wizard for setup wizard again.

[System Menu – System Configuration]




SYSTEM MENU - NETWORK SERVICES

System Menu – Network Services

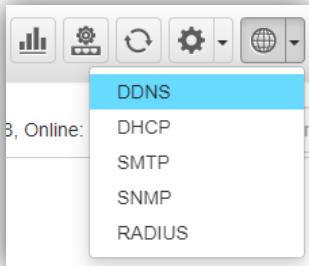

- **Network Services:** On this page, you can set up DDNS, DHCP, SMTP, SNMP, and RADIUS of the system.
- **DDNS:** Click “DDNS” to use PLANET Easy DDNS services or Dynamic DDNS. (Supports PLANET DDNS/Easy DDNS)
- Click “Apply” to apply the setting.

[System Menu – DDNS]

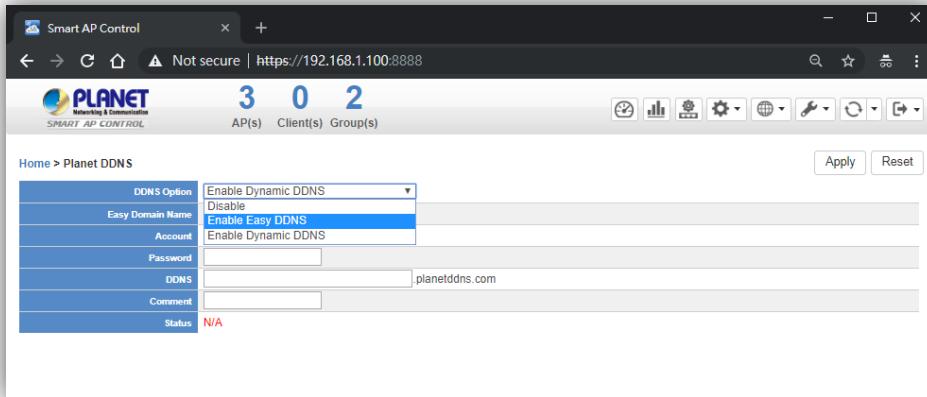


The screenshot shows the PLANET Smart AP Control software interface, specifically the DDNS Setting page. The title bar reads "Smart AP Control" and the address bar shows "Not secure | https://192.168.1.100:8888". The main header displays "3 0 2" (AP(s), Client(s), Group(s)). The left sidebar shows "Home > Planet DDNS". The right panel contains a form with the following fields:

DDNS Option	Enable Dynamic DDNS
Easy Domain Name	Disable
Account	Enable Easy DDNS
Password	planetddns.com
DDNS	planetddns.com
Comment	
Status	N/A


 There are "Apply" and "Reset" buttons at the bottom right of the form.

[DDNS Setting]

System Menu – Network Services

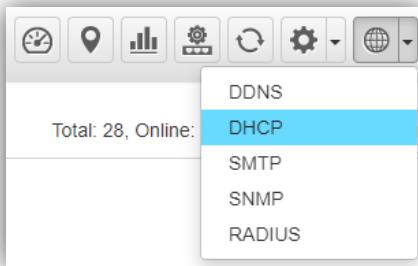

[System Menu – DHCP]

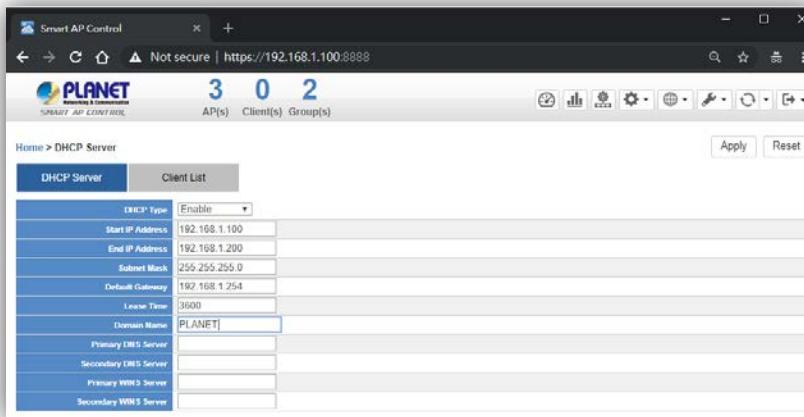

The screenshot shows a web-based management interface for a PLANET Smart AP. The top navigation bar includes links for Home, AP Control, and AP Status. The main header displays '3 0 2' (AP(s), Client(s), Group(s)). Below the header, there are tabs for 'DHCP Server' (selected) and 'Client List'. The 'DHCP Server' tab contains the following configuration fields:


DHCP Type	Enable
Start IP Address	192.168.1.100
End IP Address	192.168.1.200
Subnet Mask	255.255.255.0
Default Gateway	192.168.1.254
Lease Time	3600
Domain Name	PLANET
Primary DNS Server	
Secondary DNS Server	
Primary WINS Server	
Secondary WINS Server	

At the bottom right of the configuration area are 'Apply' and 'Reset' buttons.

[DHCP Setting]

- **Network Services:** On this page, you can set up DDNS, DHCP, SMTP, SNMP, and RADIUS of the system.
- **DHCP:** On the DHCP Server page, choose “Enable” to use DHCP server service. On Client list page, you can see the Client detailed information.
- Click “Apply” to apply the setting.

System Menu – Network Services

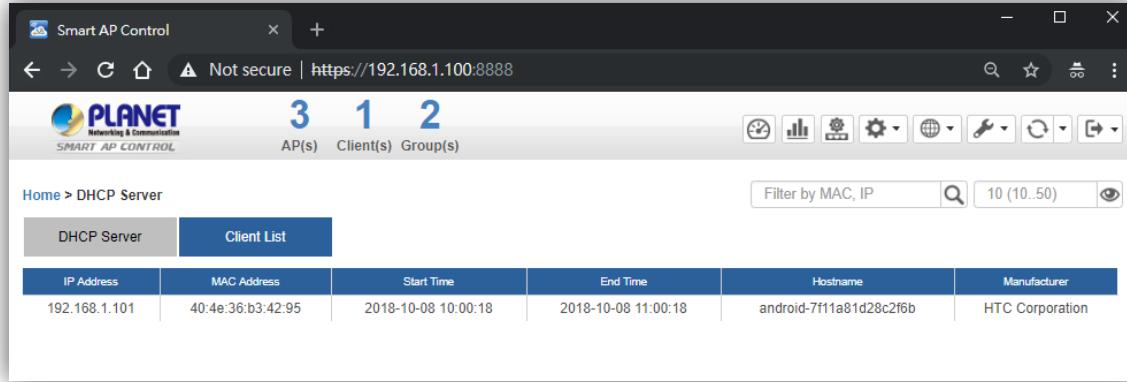


The screenshot shows a web browser window titled "Smart AP Control" with the URL <https://192.168.1.100:8888>. The page displays network statistics: 3 AP(s), 1 Client(s), and 2 Group(s). The main content area is titled "Home > DHCP Server" and shows a "Client List". The table has columns for IP Address, MAC Address, Start Time, End Time, Hostname, and Manufacturer. One entry is listed:

IP Address	MAC Address	Start Time	End Time	Hostname	Manufacturer
192.168.1.101	40:4e:36:b3:42:95	2018-10-08 10:00:18	2018-10-08 11:00:18	android-7f11a81d28c2f6b	HTC Corporation

[Client List Information]

System Menu – Network Services

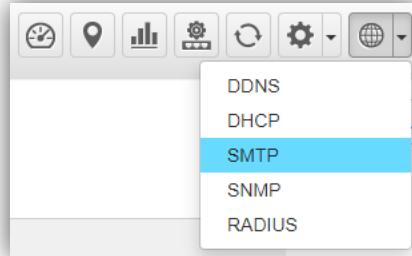

- **Network Services:** On this page, you can set up DDNS, DHCP, SMTP, SNMP, and RADIUS of the system.
- **SMTP:** On the SMTP page, choose “Enable” to use SMTP service.
- Click “Apply” to apply the setting.

[System Menu – SMTP]


Home > SMTP Configuration

SMTP Configuration	
SMTP Email Alarm	Enable <input type="button" value="▼"/>
External SMTP Server	
DNS or IP Address	smtp.domain.com or 192.168.0.1
Port	587
Authentication	
Username	example@domain.com
Password	<input type="password"/>
Email Subject	
Prefix	[NMS-500]
Mail To	<input type="button" value="+"/>
1. example@domain.com	


Test Apply Reset

[SMTP Setting]

System Menu – Network Services

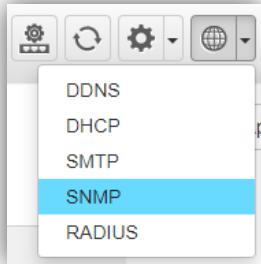

[System Menu – SNMP]

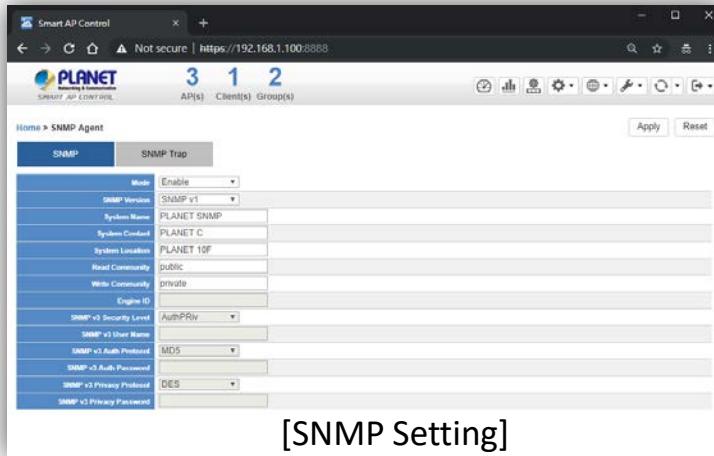

The screenshot shows a web-based management interface for a PLANET Smart AP. The title bar says 'Smart AP Control'. The main navigation bar has tabs for 'AP(s)', 'Client(s)', and 'Group(s)'. Below the navigation, there's a breadcrumb trail: 'Home > SNMP Agent'. The main content area has two tabs: 'SNMP' (selected) and 'SNMP Trap'. The 'SNMP' tab contains several configuration fields:


- Mode: Enable (dropdown menu)
- SNMP Version: SNMP v1 (dropdown menu)
- System Name: PLANET SNMP
- System Contact: PLANET C
- System Location: PLANET 10F
- Read Community: public
- Write Community: private
- Engine ID: (text input)
- SNMP-v3 Security Level: AuthPRiv (dropdown menu)
- SNMP-v3 User Name: (text input)
- SNMP-v3 Auth Protocol: MD5 (dropdown menu)
- SNMP-v3 Auth Password: (text input)
- SNMP-v3 Privacy Protocol: DES (dropdown menu)
- SNMP-v3 Privacy Password: (text input)

At the bottom right of the configuration area are 'Apply' and 'Reset' buttons.

[SNMP Setting]

- **Network Services:** On this page, you can set up DDNS, DHCP, SMTP, SNMP, and RADIUS of the system.
- **SNMP:** On the SNMP Agent page, choose “Enable” to use SNMP v1, v2c, v3 service. On the SNMP Trap page, you can set up the SNMP Trap Configuration.
- Click “Apply” to apply the setting.

System Menu – Network Services

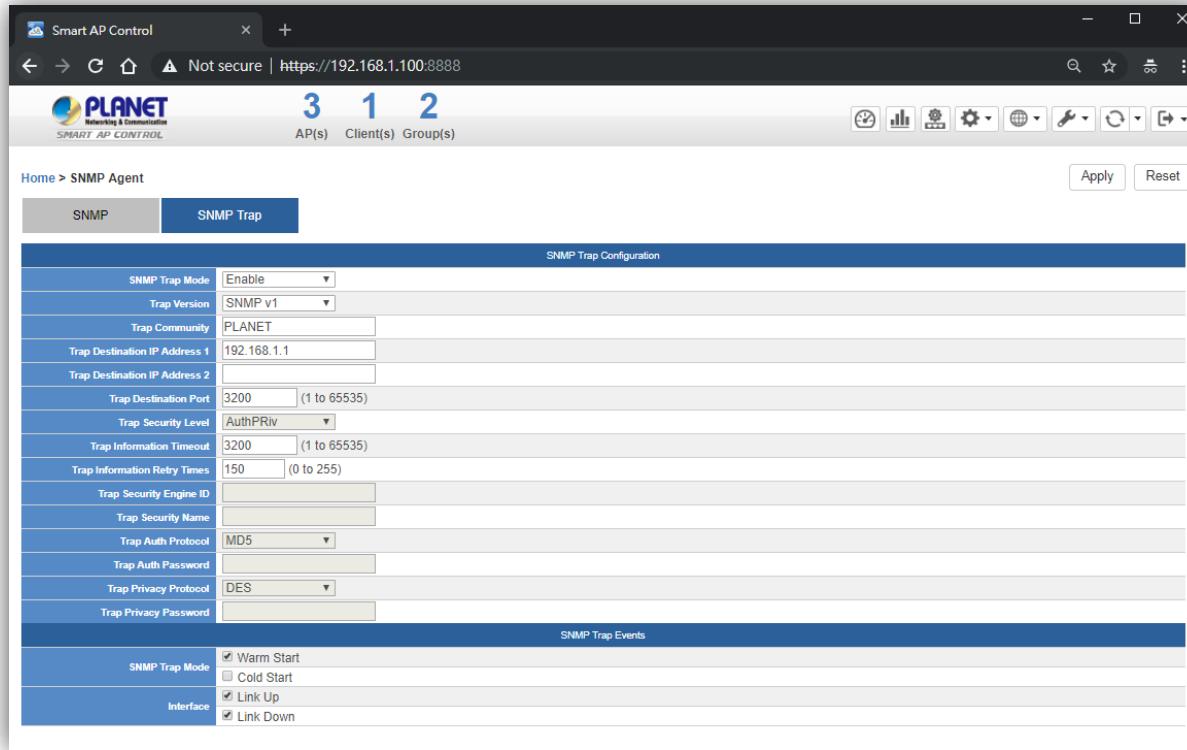

The screenshot shows the Smart AP Control interface for configuring the SNMP Trap settings. The top navigation bar displays the title "Smart AP Control" and the URL "Not secure | https://192.168.1.100:8888". Below the title, there are three status indicators: "3 AP(s)", "1 Client(s)", and "2 Group(s)". The main menu includes icons for Home, System, Network, Security, Application, Monitoring, and Help.

The current page is "Home > SNMP Agent". The "SNMP Trap" tab is selected. The configuration section is titled "SNMP Trap Configuration" and contains the following fields:

- SNMP Trap Mode: Enable (selected)
- Trap Version: SNMP v1
- Trap Community: PLANET
- Trap Destination IP Address 1: 192.168.1.1
- Trap Destination IP Address 2: (empty)
- Trap Destination Port: 3200 (1 to 65535)
- Trap Security Level: AuthPRIV
- Trap Information Timeout: 3200 (1 to 65535)
- Trap Information Retry Times: 150 (0 to 255)
- Trap Security Engine ID: (empty)
- Trap Security Name: (empty)
- Trap Auth Protocol: MD5
- Trap Auth Password: (empty)
- Trap Privacy Protocol: DES
- Trap Privacy Password: (empty)


The "SNMP Trap Events" section contains the following checkboxes:

- SNMP Trap Mode: Warm Start (checked), Cold Start (unchecked)
- Interface: Link Up (checked), Link Down (checked)

At the bottom right of the configuration area are "Apply" and "Reset" buttons.


[SNMP Trap Configuration]

System Menu – Network Services

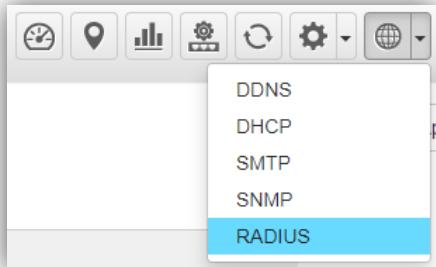

[System Menu – RADIUS]

- **Network Services:** On this page, you can set up DDNS, DHCP, SMTP, SNMP, and RADIUS of the system.
- **RADIUS:** On the RADIUS page, choose “Enable” to use RADIUS service. On RADIUS Client page and RADIUS User Account page, you can see the detailed information of them.
- Click “Apply” to apply the setting.

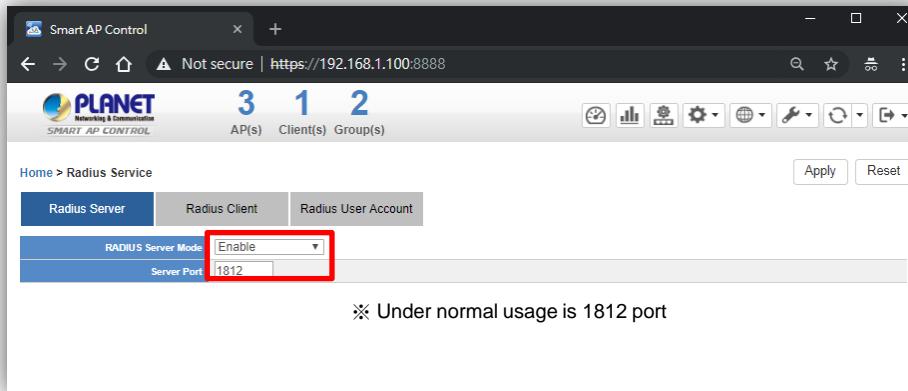

The screenshot shows a web-based management interface for a PLANET Smart AP. At the top, it displays "Smart AP Control" and navigation links. Below that, it shows the count of APs (3), Clients (1), and Groups (2). The main content area is titled "Radius Service". It has three tabs: "Radius Server" (selected), "Radius Client", and "Radius User Account". Under the "Radius Server" tab, there are two configuration fields: "RADIUS Server Mode" set to "Enable" (with a red box around the dropdown) and "Server Port" set to "1812" (with a red box around the input field). At the bottom of the page, a note states: "※ Under normal usage is 1812 port".


[RADIUS Setting]

System Menu – Network Services



[System Menu – RADIUS Client]

- [Add Radius Client Configuration](#): On this page, you can set up Name, Client IP, Shared Secret Key, and Description of the system.
- Click “Apply” to apply the setting.
- [AP RADIUS Setup](#): You should go to AP’s Web UI to RADIUS page to set up Radius Server IP, Password and Server Port (1812), and enable the function.

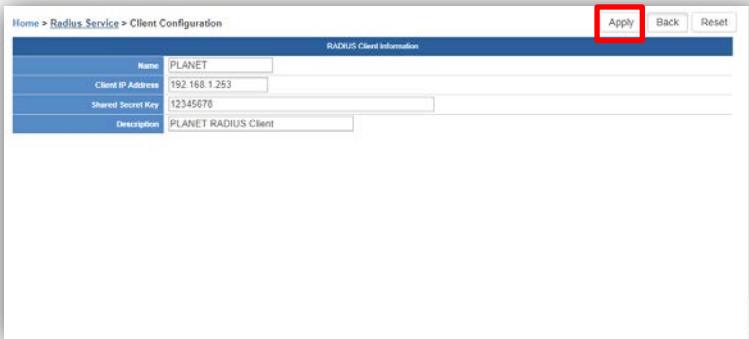

This screenshot shows the 'Client Configuration' page for a specific RADIUS client. The page has a header 'RADIUS Client Information'. It contains four input fields: 'Name' (PLANET), 'Client IP Address' (192.168.1.253), 'Shared Secret Key' (12345678), and 'Description' (PLANET RADIUS Client). Below the fields is a row with three buttons: 'Apply' (highlighted with a red box), 'Back', and 'Reset'.

[RADIUS Client Setting]


System Menu – Network Services

Radius Client						
	Num.	Name	Client IP Address	Secret Key	Description	Action
<input type="checkbox"/>	1	PLANET	192.168.1.253	12345678	PLANET RADIUS Client	 

Total Clients: 1


[RADIUS Client Setting Finished]

System Menu – Network Services

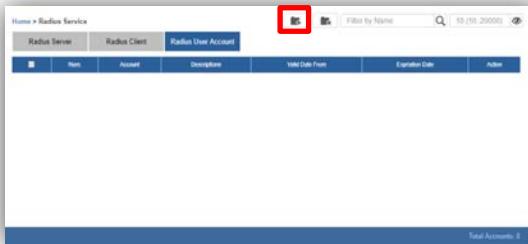

[System Menu – RADIUS]

- **Add RADIUS User Account:** On this page, you can set up Account Name, Password, Description, and Validation Period information of the system.
- Click “Apply” to apply the setting.

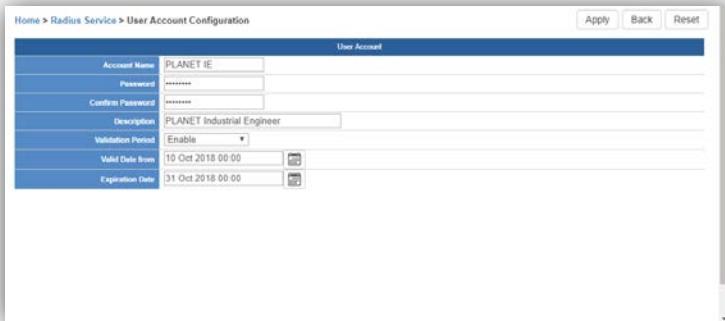
 A screenshot of a 'User Account' configuration form. The form has a blue header bar with 'User Account' text. Below the header are several input fields:

- Account Name: PLANET IE
- Password: (redacted)
- Confirm Password: (redacted)
- Description: PLANET Industrial Engineer
- Validation Period: Enable (dropdown menu)
- Valid Date From: 10 Oct 2018 00:00 (with a calendar icon)
- Expiration Date: 31 Oct 2018 00:00 (with a calendar icon)

 At the top right of the form are three buttons: 'Apply', 'Back', and 'Reset'.

[RADIUS User Account Setting]

System Menu – Network Services

Home > Radius Service

Radius Server	Radius Client	Radius User Account		
			Valid Date From	Expiration Date
<input type="checkbox"/>	Num.	Account	Description	Action
<input type="checkbox"/>	1	PLANET IE	PLANET Industrial Engineer	 


Total Accounts: 1

[RADIUS User Account Setting Finished]



SYSTEM MENU - MAINTENANCE

System Menu – Maintenance

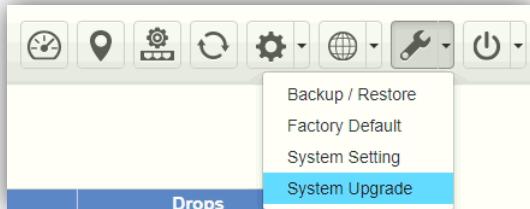

[System Menu – Maintenance]




[System Upgrade]


- **System Upgrade:** On this page, you can upgrade the system to the latest version with new patch.
- Click “Choose File” to designate the system patch file for upgrade. Then, click the upgrade icon at the upper-right corner to start the system upgrade.
- Please regularly check PLANET official website for the system upgrade file.

*Remote login must be used for the NMS-1000V to do firmware upgrade.

System Menu – Maintenance

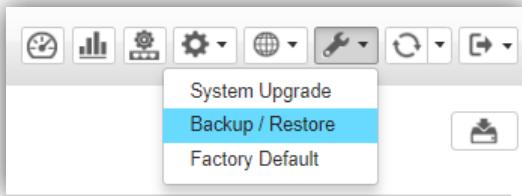

[System Menu – Maintenance]

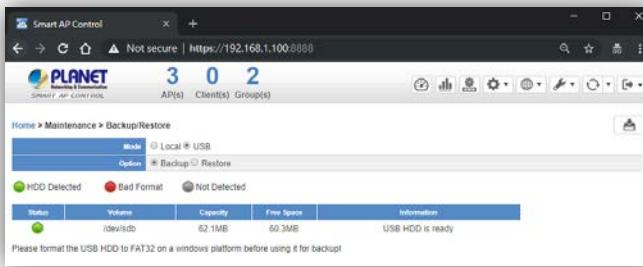

Not secure | https://192.168.1.100:8888

3 0 2
AP(s) Client(s) Group(s)

Home > Maintenance > Backup/Restore


Mode: Local (USB)
Option: Backup (Restore)

HDD Detected: Bad Format (Not Detected)

Status	Volume	Capacity	Free Space	Information
Green	/dev/sdb	62.1MB	60.3MB	USB HDD is ready

Please format the USB HDD to FAT32 on a windows platform before using it for backup!

[Backup]

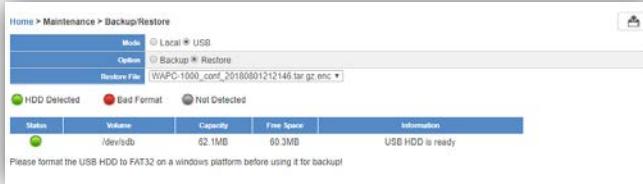

Home > Maintenance > Backup/Restore

Mode: Local (USB)
Option: Backup (Restore)

Restore File: [WAPC-1000.conf_20180801212146.tar.gz.enc]

HDD Detected: Bad Format (Not Detected)


Status	Volume	Capacity	Free Space	Information
Green	/dev/sdb	62.1MB	60.3MB	USB HDD is ready

Please format the USB HDD to FAT32 on a windows platform before using it for backup!

[Restore]


- **Backup/Restore:** On this page, you can back up and restore the system profiles with the system file (*.tar.gz.enc).
- Click “backup” to start backing up the system profiles file in HDD or USB.
- Use the “Choose File” button to choose the right system profiles file and click “restore” to start restoring the system.
- Please use the system default file name to restore system, or it may fail.

System Menu – Maintenance

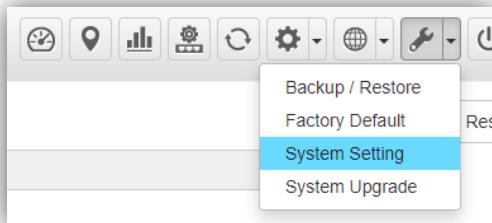

- **System Setting:** Click “System Setting” to set up Logout Time for manual or selection tree.

[System Menu – Maintenance]

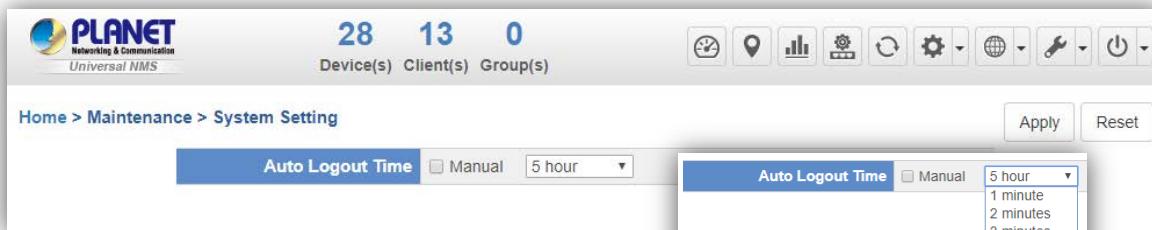

Universal NMS

28 13 0
Device(s) Client(s) Group(s)

Home > Maintenance > System Setting

Auto Logout Time Manual 5 hour ▾

Auto Logout Time Manual 5 hour ▾


1 minute
2 minutes
3 minutes
5 minutes
10 minutes
15 minutes
20 minutes
25 minutes
30 minutes
35 minutes
40 minutes
45 minutes
1 hour
2 hour
3 hour
4 hour

Apply Reset

[Auto Logout Time]



System Menu – Maintenance

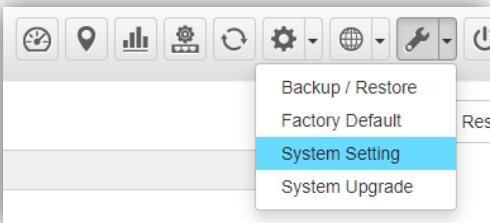

- **System Setting:** Click “System Setting” to adjust the Brightness of touch screen.

[System Menu – Maintenance]

Home > Maintenance > System Setting


Auto Logout Time: Manual 1 hour ▾

Brightness Adjust: 65

Apply Reset


[Brightness Adjust]

System Menu – Maintenance

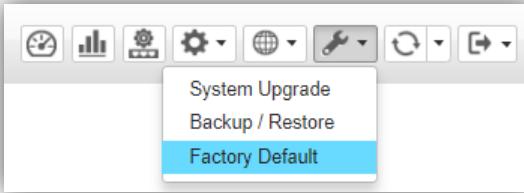

- **Factory Default:** Click “Factory Default” to reset the system to factory default. Once clicked, the warning window will prompt you to reset system to default.

[System Menu – Factory Default]

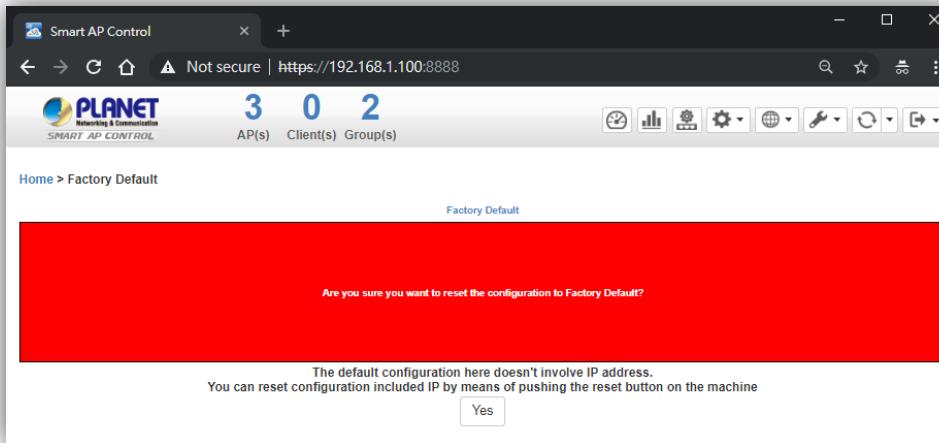


[Factory Default Warning]



SYSTEM MENU - EXIT

System Menu – Exit

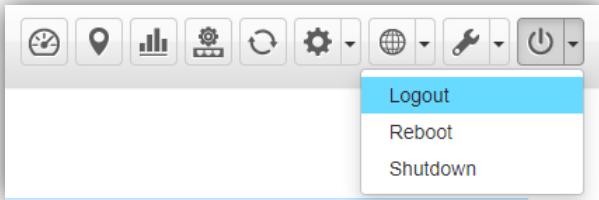


[System Menu – Logout]

- **Exit:** On this page, you can log out, reboot, or shut down the system.
- **Logout:** Click “Logout” to log out the system.
- Once clicked, the login window will prompt you to re-log in the system.




[Login Window]

System Menu – Exit

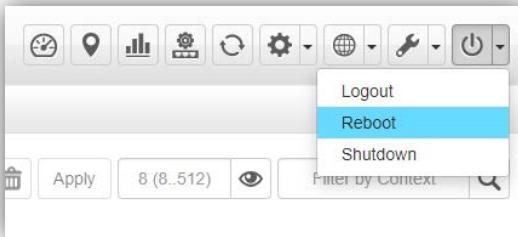

[System Menu – Reboot]

- **Logout:** On this page, you can log out, reboot, or shut down the system.
- **Reboot:** Click “Reboot” to restart the system.
- **Shutdown:** Click “Shutdown” to close the system and shut down the MV.
- Once clicked, the warning window will prompt you to reboot or shut down the system.

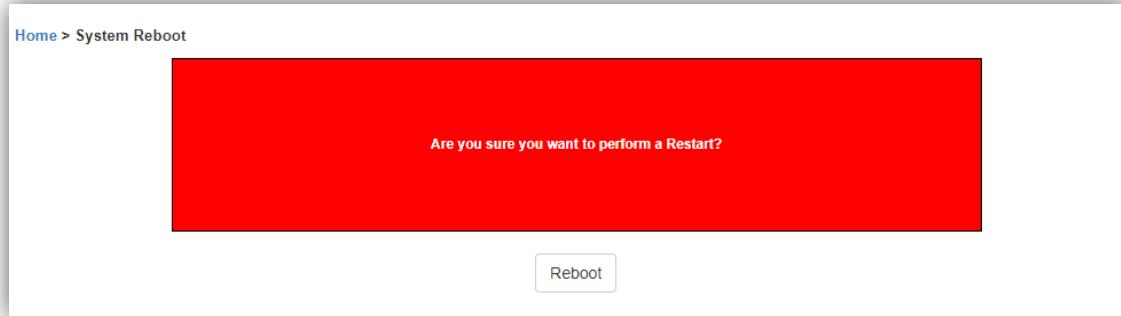

[Reboot Warning]



HDMI OUTPUT

HDMI Output

➤ **HDMI Output:** NMS-1000V-12 and NMS-1000V-10 support HDMI Output function.

※ Please follow the steps below to make sure this function works correctly.

- 1 · Open NMS-1000 to log in page.
- 2 · Make sure the TV or Screen supports [resolutions of 1024 x 768](#) for best optimization.
- 3 · Connect NMS-1000V and TV or Screen with HDMI cable.





APPENDIX

Appendix – MQTT Devices Support List

Item	Switch	The Latest Firmware version	Industrial Switch	The Latest Firmware version
1	GS-4210-8P2S	GS-4210-8P2S_v2.305b200330.bix	IGS-10020HPT	IGS10020HPT_V3_v3.440b200331.mfi
2	GS-4210-8P2T2S	GS-4210-8P2T2S_v2.305b200330.bix	IGS-10020PT	IGS10020PT_V3_v3.440b200331.mfi
3	GS-4210-48T4S	GS-4210-48T4S_v2.305b200330.bix	IGS-12040MT	IGS12040MT_v2.440b200331.mfi
4	GS-4210-48P4S	GS-4210-48P4S_v2.305b200330.bix	IGS-20160HPT	IGS20160HPT_v2.440b200331.mfi
5	GS-4210-24T2S	GS-4210-24T2S_v2.305b200330.bix	IGS-20040MT	IGS20040MT_v2.440b200331.mfi
6	GS-4210-16T2S	GS-4210-16T2S_v2.305b200330.bix	IGS-10020MT	IGS10020MT_v3.440b200331.mfi
7	GS-4210-24P(L)4C	GS-4210-24P4C_v2.305b200330.bix	IGS-5225-8P4S	IGS52258P4S_v3.440b200331.mfi
8	GS-4210-24P2S	GS-4210-24P2S_v3.305b200331.bix	IGS-5225-8P2T2S	IGS52258P2T2S_v2.440b200331.mfi
9	GS-4210-16P4C	GS-4210-16P4C_v2.305b200331.bix	IGS-5225-4UP1T2S	IGS52254UP1T2S_v4.440b200331.mfi
10	GS-4210-16P2S	GS-4210-16P2S_v2.305b200331.bix	IGS-5225-4P2S	IGS52254P2S_v1.440b200331.mfi
11			IGS-5225-4T2S	IGS52254T2S_v2.440b200331.mfi
Item	Router	The Latest Firmware version	Industrial Router	The Latest Firmware version
1	VR-100	VR-100_v1.1907b200326.bin	IVR-100	IVR-100_v1.1907b200326.bin
Item	NMS	The Latest Firmware version	Industrial NMS	The Latest Firmware version
1	NMS-500	NMS-500_v1.0b200514	NMS-1000V-12	NMS-1000V-12_v1.0b200514
2			NMS-1000V-10	NMS-1000V-10_v1.0b200514

Appendix – Wireless (AP) Support List

Item	Wireless AP	The Latest Firmware version
1	WDAP-W7200AC	V1.3465cb171030
2	WDAP-C7200AC	V1.3465cb171030
3	WNAP-C3220A	V1.3465cb171030
4	WNAP-W2201A	V1.3465cb171030
5	WDAP-W705E	WDAP-W750E-AP-V3.0*feature in future
6	WNAP-W2200UE	WNAP-W2200UE-AP-V1.0
7	WDAP-C7200E	WDAP-C7200E-AP-V1.0
8	WNAP-C3220E	WNAP-C3220E-AP-V1.0
9	WBS-202N	WBS-202N-AP-V1.0
10	WDAP-702AC	WDAP-702AC-V1.0
11	WBS-502AC	WBS-502N-AP-V1.0
12	WAP-252N	WAP-252N-AP-V1.0
13	WBS-502N	WBS-502N-AP-V1.0
14	WDAP-802AC	WDAP-802AC-AP-V1.0
15	WAP-552N	WAP-552N-AP-V1.0
16	WBS-200N	WBS-200N-V1.0
17	WAP-200N	WAP-200N-V1.0
18	WAP-500N	WAP-500N-V1.0
19	WDAP-512AC	WDAP-512AC-AP-V3.0*feature in future

A wide-angle, aerial photograph of a city skyline at dusk or night. The sky is a deep blue with scattered clouds. In the foreground, a multi-lane highway curves through the city, its lights creating long, streaky trails. The city is densely packed with buildings of various heights, many of which are illuminated from within, adding to the overall glow. The overall atmosphere is one of a bustling, modern urban environment.

THANK YOU