

# 1. Package Contents

Thank you for purchasing PLANET Universal Network Management Controller. The description of the model is shown below:


**NMS-500** Enterprise-class Universal Network Management Controller **"NMS-500 Controller"** is used as an alternative name in this Quick Installation Guide.

Package Contents:

- The NMS-500 Controller x 1
- Quick Installation Guide x 1
- RS232 to RJ45 Console Cable x 1
- Adapter with Power Cord x 1
- UDP Cable x 1
- Round Gasket x 4

If any item is found missing or damaged, contact your local reseller for replacement.

# 2. Hardware Description

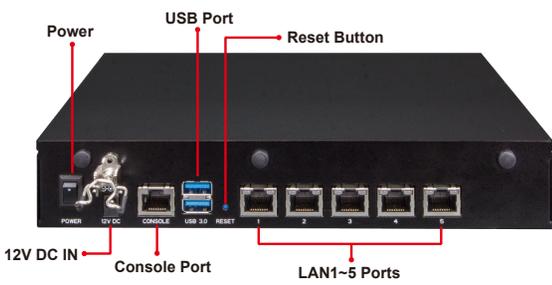


**Reset Button:** <5 sec: System reboot;> 5 sec: Factory default

# 4. Entering into the Web Management

Default IP Address: **192.168.1.100**  
 Default Management Port: **8888**  
 Default Username: **admin**  
 Default Password: **admin**

Launch the Web browser (Google Chrome with seamless mode is recommended.) and enter the default IP address **"https://192.168.1.100:8888"**. Then, enter the default username and password shown above to log on to the system.


The secure login with SSL (HTTPS) prefix is required.

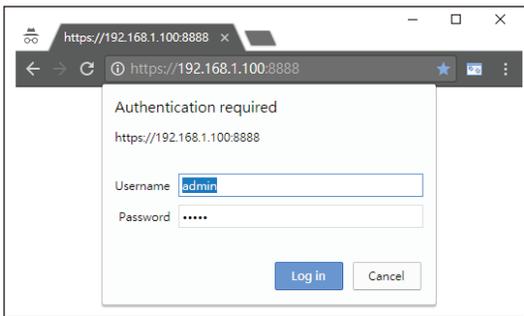


After logging on, connect the NMS-500 Controller to the managed network to centrally control PLANET managed devices.

# 3. Wired Network Configuration

A computer with wired Ethernet connection is required for the first-time configuration of the **NMS-500 Controller**.

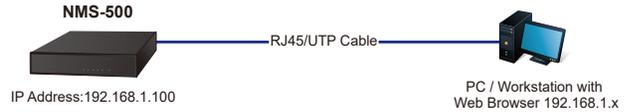

1. Go to **"Control Panel-> Network and Sharing Center-> Change Adapter Settings"**.
2. Double-click **"Local Area Connection"**.
3. Select **"Internet Protocol version 4 (TCP/IPv4)"** and click **"Properties"**.
4. Select **"Use the following IP address"** and then click the **"OK"** button twice to save the configuration. For example, the default IP address of the NMS-500 Controller is **192.168.1.100**, then the manager PC should be set to **192.168.1.x** (where x is a number between 1 and 254, except 100), and the default subnet mask is 255.255.255.0.

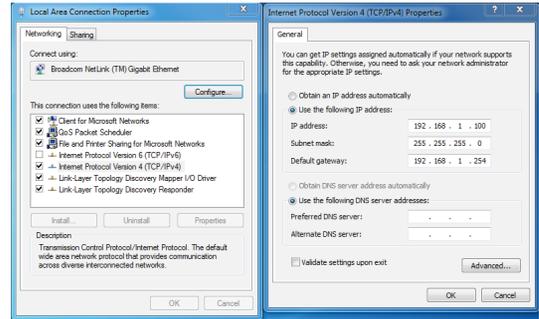


# 5. Deployed Devices Monitored via NMS-500 Controller

The NMS-500 incorporated in a workstation or PC can monitor all the deployed wired or wireless PoE industrial-grade network devices, such as managed switches, media converters, routers, smart APs, VoIP phones, IP cameras, etc. compliant with the SNMP Protocol, ONVIF Protocol and PLANET Smart Discovery utility.

**Please regularly check PLANET website for the latest compatibility list of managed devices.**

Follow the steps below to set up the device from the **"Standalone device"** mode to the **"Managed device"** mode.

**Step 1:** Connect the devices, NMS-500 Controller and your computer to the same network.

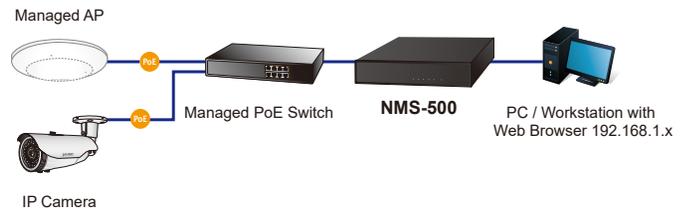

**Step 2:** Switch: Log in to the Switch's Web User Interface and **enable** the **SNMP** and **LLDP** function.

AP: Log in to the AP's Web User Interface to configure the AP to **"Managed AP"**. In support of **SNMP** AP, enable the SNMP function.

IP Cam: The **ONVIF** function is enabled by default.

[www.PLANET.com.tw](http://www.PLANET.com.tw)

# Enterprise-class Universal Network Management Controller

**NMS-500**



**PLANET Technology Corp.**  
10F., No. 96, Minquan Rd., Xindian Dist., New Taipei City 231, Taiwan

**Warning:**  
This device is compliant with Class A of CISPR 32.  
In a residential environment this device may cause radio interference.



2011-N10010-000

**Step 3:** From the management UI of the **NMS-500 Controller**, go to the "Domain" page to select "**Discovery**" and "**Search**" to locate the managed devices. To add a new device to the device list, select it in the check box and then "Apply".

Then, you can go to the "**Device List**" page to configure the device by using hyperlink to log in to the device web page.

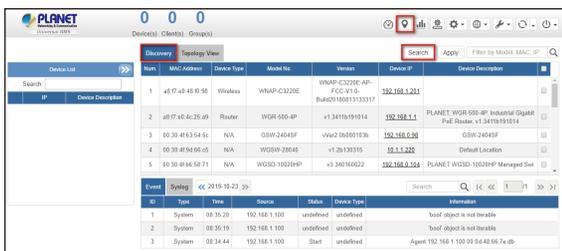


Figure 1

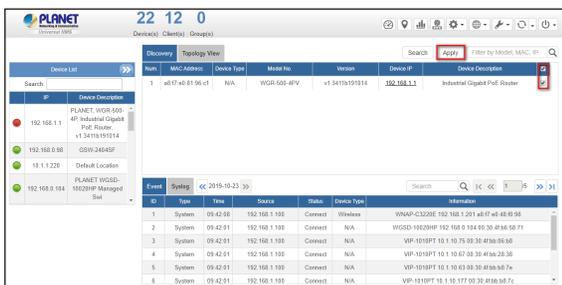


Figure 2

For more information on the configuration of **Managed Devices** by using **PLANET NMS-500 Controller**, refer to the user manual of the NMS-500 Controller.

## Further Information:

The above steps introduce the simple installations and configurations of the NMS-500 Controller. For further configurations of PLANET UNI-NMS, please refer to the user manual, which can be downloaded from the website.

<https://www.planet.com.tw/en/support/downloads?method=keyword&keyword=NMS-500&view=3#list>



If you have further questions, please contact the local dealer or distributor where you purchased this product.