

**L3 46-Port 100/1000BASE-X SFP + 2-Port Gigabit  
TP/SFP + 4-Port 10G SFP+ Managed Switch**

**GS-6320-46S2C4XR**

Quick Installation Guide

# Table of Contents

1. Package Contents .....	3
2. Requirements .....	4
3. Wiring the Power Inputs.....	5
4. Terminal Setup .....	6
4.1 Logging on to Console .....	7
4.2 Configuring IP Address.....	8
4.3 Storing Current Switch Configuration.....	10
5. Starting Web Management .....	11
5.1 Logging in to the L3 Managed Switch.....	11
5.2 Saving Configuration.....	14
6. Recovering Back to Default Configuration.....	15
7. Customer Support .....	16

---

## 1. Package Contents

Thank you for purchasing PLANET L3 46-Port 100/1000BASE-X SFP + 2-Port Gigabit TP/SFP + 4-Port 10G SFP+ Managed Switch, the GS-6320-46S2C4XR.

“L3 Managed Switch” mentioned in this quick installation guide refers to the GS-6320-46S2C4XR.

Open the box of the L3 Managed Switch and carefully unpack it. The box should contain the following items:

Package Item	Model Name	GS-6320-46S2C4XR
The L3 Managed Switch		1
Quick Installation Guide		1
RJ45 to RS232 Console Cable		1
Rubber Feet		4
Power Cord		1
SFP Dust Caps		52
Two Rack-mounting Brackets with Attachment Screws		■

If any item is found missing or damaged, please contact your local reseller for replacement.

## 2. Requirements

- Workstations running Windows XP/2003/2008/Vista/7/8/10, MAC OS X or later, Linux, UNIX, or other platforms are compatible with TCP/IP protocols.
- Workstations are installed with Ethernet NIC (Network Interface Card).
- **Serial Port Connection (Terminal)**
  - The above workstations come with **COM port** (DB9) or **USB-to-RS232** converter.
  - The above workstations have been installed with **terminal emulator**, such as Tera Term, PuTTY or Hyper Terminal included in Windows XP/2003.
  - **Serial cable** -- one end is attached to the RS232 serial port, while the other end to the console port of the L3 Managed Switch.
- **Ethernet Port Connection**
  - Network cables -- Use standard network (UTP) cables with RJ45 connectors.
  - The above PC is installed with Web browser.



### Note

It is recommended to use Internet Explorer 8.0 or above to access the L3 Managed Switch. If the Web interface of the L3 Managed Switch is not accessible, please turn off the anti-virus software or firewall and then try it again.

### 3. Wiring the Power Inputs

The rear panel of the L3 Managed Switch has an AC power socket, one DC power on/off switch and one DC inlet terminal block within 2 screws.



Figure 3-1: L3 Managed Switch Rear Panel

#### ■ DC Inlet Terminal Block

The DC inlet terminal block accepts DC power input voltage from 36V to 60V DC. Connect the power cable to the L3 Managed Switch at the DC input terminal block; the size of the two screws in the terminal block is M3.5.

Please follow the steps below to insert the DC power wire.

1. Insert the negative wire (**Black**) into the **"V-"** connector and tighten the wire-clamp to prevent the DC wire from loosening.
2. Insert the positive wire (**Red**) into the **"V+"** connector and tighten the wire-clamp to prevent the DC wire from loosening.
3. Power on the L3 Managed Switch by switching it to the **"ON"** position.


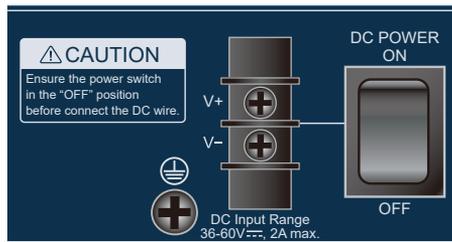


Figure 3-2: L3 Managed Switch DC Inlet Terminal Block

<p>Warning</p>	<p>Before connecting the DC power cable to the input terminal block of the L3 Managed Switch, make sure that the power switch is in the <b>"OFF"</b> position and the DC power is <b>OFF</b>.</p>
<p>Note</p>	<p>The wire gauge for the terminal block should be in the range from <b>12</b> to <b>24</b> AWG.</p>

## 4. Terminal Setup

To configure the system, connect a serial cable to a COM port on a PC or notebook computer and to the DB9 type of RJ45 serial port of the L3 Managed Switch.

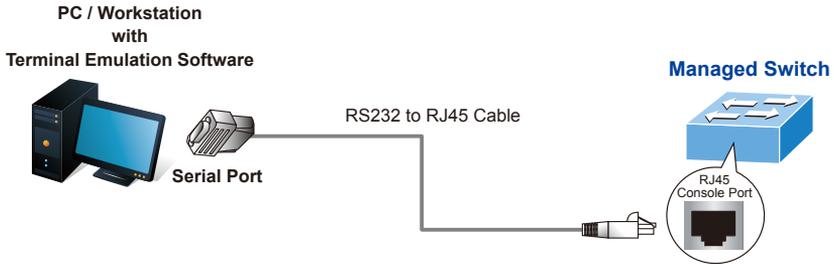

**Figure 4-1:** L3 Managed Switch Console Connectivity

A terminal program, such as Tera Term or PuTTY, is required to make the software connection to the L3 Managed Switch.

1. Run terminal program on the OS.
2. When the following screen appears, make sure that the COM port should be configured as:

- ◆ Baud: 115200
- ◆ Data bits: 8
- ◆ Parity: None
- ◆ Stop bits: 1
- ◆ Flow control: None



**Figure 4-2:** COM Port Configuration

## 4.1 Logging on to Console

Once the terminal is connected to the device, power on the L3 Managed Switch, and the terminal will display "running testing procedures". Then, the following message asks to log in user name and password. The factory default user name and password are shown as follows and the login screen in Figure 4-3 appears.

```
Username: admin  
Password: admin
```

```
Press ENTER to get started  
  
Username: admin  
Password:  
GS-6320-46S2C4XR#
```

**Figure 4-3:** L3 Managed Switch Console Login Screen

The user can now enter commands to manage the L3 Managed Switch. For a detailed description of the commands, please refer to the following chapters.



### Note

1. For security reason, please change and memorize the new password after this first setup.
2. Only accept command in lowercase letter under console interface.

## 4.2 Configuring IP Address

The L3 Managed Switch is shipped with default IP address shown below.

IP Address: **192.168.0.100**  
Subnet Mask: **255.255.255.0**

To check the current IP address or modify a new IP address for the Switch, please use the procedures as follows:

### ■ Showing the Current IP Address

1. At the “#” prompt, enter “**show ip interface brief**”.
2. The screen displays the current IP address as shown in Figure 4-4.

```
Press ENTER to get started
Username: admin
Password:
GS-6320-46S2C4XR# show ip interface brief
Interface  Address                Method  Status
-----
VLAN 1    192.168.0.100/24      Manual  UP
GS-6320-46S2C4XR#
```

Figure 4-4: IP Information Screen

## ■ Configuring IP Address

3. At the “#” prompt, enter the following command and press <Enter> as shown in Figure 4-5.

```
GS-6320-46S2C4XR # configure terminal
GS-6320-46S2C4XR (config)# interface vlan 1
GS-6320-46S2C4XR (config-if-vlan)# ip address 192.168.1.100 255.255.255.0
```

```
GS-6320-46S2C4XR# configure terminal
GS-6320-46S2C4XR(config)# interface vlan 1
GS-6320-46S2C4XR(config-if-vlan)# ip address 192.168.1.100 255.255.255.0
GS-6320-46S2C4XR(config-if-vlan)# exit
GS-6320-46S2C4XR(config)#
```

**Figure 4-5:** Configuring IP Address Screen

The previous command would apply the following settings for the L3 Managed Switch.

IP Address: **192.168.1.100**  
Subnet Mask: **255.255.255.0**

4. Repeat step 1 to check if the IP address is changed.

If the IP is successfully configured, the L3 Managed Switch will apply the new IP address setting immediately. You can access the Web interface of the L3 Managed Switch through the new IP address.

### 4.3 Storing Current Switch Configuration

In the L3 Managed Switch, the running configuration sequence running-config can be saved from the RAM to FLASH by “**copy**” command, so that the running configuration sequence becomes the start-up configuration file, which is called configuration save.

At the “#” prompt, enter the following command and press <Enter>.

```
# copy running-config startup-config
```

```
GS-6320-46S2C4XR# copy running-config startup-config
Building configuration...
do not reset or power off the device!
% Saving 8432 bytes to flash:startup-config
GS-6320-46S2C4XR#
```

Figure 4-6: Saving Current Configuration Command Screen



#### Note

If you are not familiar with the console command or the related parameter, enter “**help**” anytime in console to get the help description.

## 5. Starting Web Management

The following shows how to start up the Web Management of the L3 Managed Switch. Note the L3 Managed Switch is configured through an Ethernet connection. Please make sure the manager PC must be set to the same IP subnet address.

For example, the default IP address of the L3 Managed Switch is 192.168.0.100, then the manager PC should be set to 192.168.0.x (where x is a number between 1 and 254, except 100), and the default subnet mask is 255.255.255.0.

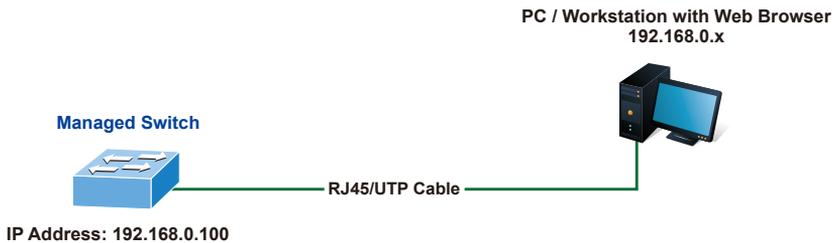


Figure 5-1: IP Management Diagram

### 5.1 Logging in to the L3 Managed Switch

1. Use Internet Explorer 8.0 or above Web browser and enter IP address **<http://192.168.0.100>** (the factory default IP address or the one that you have just changed in console) to access the Web interface.


- When the following dialog box appears, please enter the default user name and password "admin" (or the password you have changed via console). The login screen in Figure 5-2 appears.

Default IP Address: **192.168.0.100**  
Default Username: **admin**  
Default Password: **admin**



**Figure 5-2: Login Screen**

- After entering the password, the main screen appears as Figure 5-3 shows.

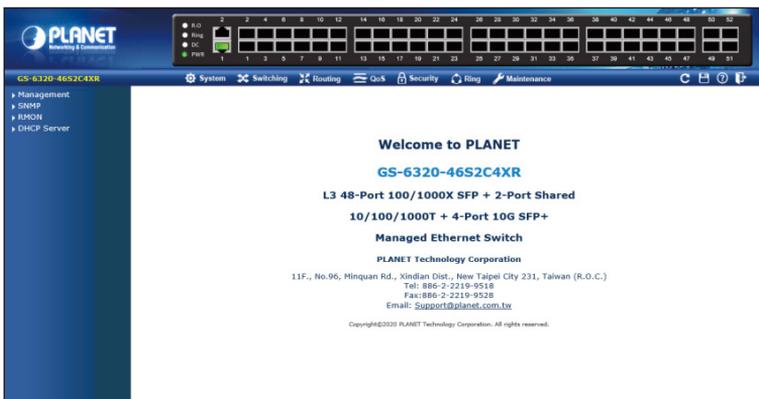

**Figure 5-3: Web Main Screen of Managed Switch**

The Switch Menu on the top of the Web page lets you access all the commands and statistics the L3 Managed Switch provides. The Switch Menu always contains one or more buttons, such as **“Refresh”**, **“Save”**, **“Help”** and **“Logout”**.



**Figure 5-4:** Switch Menu



**Figure 5-5:** Switch Menu



**Note**

If you are not familiar with Switch functions or the related parameter, press **“Help icon”** anytime on the Web page to get the help description.

Now, you can use the Web management interface to continue the Switch management or manage the Switch by console interface.

Please refer to the user’s manual for more.

## 5.2 Saving Configuration

To save all applied changes and set the current configuration as a startup configuration on the Web user interface, the startup-configuration file will be loaded automatically across a system reboot.

1. Click the **Save** icon on the top Switch Menu bar.



2. Press the "**Save Configuration**" button.



3. Or the other way to save the setting is to Click **Maintenance, Save Startup Config.**



## 6. Recovering Back to Default Configuration

### ■ IP address has been changed or admin password has been forgotten –

To reset the IP address to the default IP address “192.168.0.100” or reset the login password to default value, press the hardware-based reset button on the front panel for about 10 seconds. After the device is rebooted, you can log in the management Web interface within the same subnet of 192.168.0.xxx.

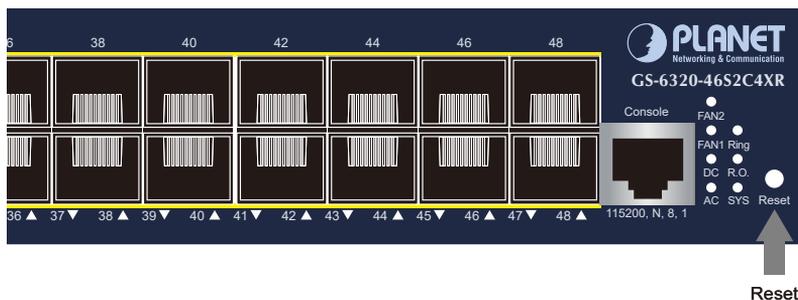


Figure 6-1: GS-6320-46S2C4XR Reset Button

---

## 7. Customer Support

Thank you for purchasing PLANET products. You can browse our online FAQ resource and User's Manual on PLANET Web site first to check if it could solve your issue. If you need more support information, please contact PLANET switch support team.

PLANET online FAQs:

<http://www.planet.com.tw/en/support/faq>

Switch support team mail address:

[support@planet.com.tw](mailto:support@planet.com.tw)

GS-6320-46S2C4XR User's Manual:

<https://www.planet.com.tw/en/support/downloads?&method=keyword&keyword=GS-6320&view=3#list>



(Please select your switch model name from the drop-down menu of Product Models.)

Copyright © PLANET Technology Corp. 2020.

Contents are subject to revision without prior notice.

PLANET is a registered trademark of PLANET Technology Corp.

All other trademarks belong to their respective owners.